



Minuteman UPS Power Monitoring and Control Software

# **User Manual**

# Contents

1. Overview	3
1.1 Features	3
1.2 OS Support	4
2. Installation/Uninstallation	5
2 1 For Windows OS	5
2.1.1 Or Windows OS	5
2.1.2 Uninstall Process	
2.2 For Linux System	9
2.2.1 Installation Process	9
2.2.2 Uninstall Process	10
3. Console Configuration	11
3.1 Console Menu	11
4. Operation in Windows	12
4.1 Web Monitor	12
4.2 Property	13
4.2.1 HTTP:	13
4.2.2 HTTPS:	13
4.2.3 Login Account:	14
4.3 Show Countdown	15
4.4 Cancel Countdown	15
4.5 Pause Notify Message	15
4.6 Stop Service	15
5. Web Interface	16
5.1 Run a Web Browser	16
5.2 Monitor >> Information >> Summary	17
5.3 Monitor >> Information >> Battery	18
5.4 Monitor >> Information >> In/Out/Bypass	18
5.5 Monitor >> Information >>Identification	19
5.6 Monitor >> Information >>Status Indication	19
5.7 Monitor >> Information >>ShutdownAgent	20
5.8 Monitor >> History >>Event Log	20
5.9 Monitor >> History >>Data Log	21
5.9.1 Observe by Day	22
5.9.2 Observe by Month	22
5.9.3 Observe by Year	22
5.9.4 Observe by User Defined	22
5.10 Monitor >> History >>Configure	23
5.11 Monitor >> About Information	23

5.12 Device >> UPS >>Configure	
5.13 Device >> UPS >>Control	
5.14 Device >> UPS >>Event Level	
5.15 Device >> Management >> Communication	
5.16 Device >> Management >> Configure	
5.17 Device >> Management >> Control	
5.18 Device >> Management >> Weekly Schedule	
5.19 Device >> Management >> Specific Schedule	
5.20 Device >> Notification >> SNMPv1 Access	
5.21 Device >> Notification >> SNMPv3 USM	
5.22 Device >> Notification >> SNMP Trap	
5.23 Device >> Notification >> Mail Server	
5.24 Device >> Notification >> SMS	
5.25 Device >> Notification >> Wake On LAN	
5.26 System >> Administration >> Information	
5.27 System >> Administration >> Login User	
5.28 System >> Administration >> Web	
5.29 System >> Administration >> Batch Configuration	
6. 2008 Server Core Setup for SentryHD	37
7. XenServer Setup for SentrvHD	39
7.1 Install PV driver for Guest OS	39
7.2 Configure SentryHD for Xen	
8 Linux KVM Setup for SentryHD	40
	40
8.2 Configure Control ID for KVIVI	
9. working with the MM ShutdownAgent	41

# 1. Overview

SentryHD is a power monitoring and control software that communicates with a UPS to retrieve the UPS's information and protects the operating system. Using a Web Browser, you can easily obtain the current UPS status, configure your shutdown strategy and view the countdown to shutdown information. SentryHD also has the ability to notify the device managers through email and SMS.

SentryHD works with multiple MM ShutdownAgents to protect a large number of hosts which are powered by the UPS.



# 1.1 Features

- Works with MM ShutdownAgent to protect a large number of hosts: Each SentryHD can connect up to 255 MM ShutdownAgent. Each MM ShutdownAgent can forward the received SNMP trap to 255 MM ShutdownAgent.
- 2. Supports RS232 to monitor and control the connected UPS.
- 3. Supports USB to monitor and control the connected UPS.
- 4. Supports SNMPv1, v2c and v3 traps.
- 5. Supports SMS for mobile notification.
- 6. Supports SNMPv1, v3 server access for monitoring SentryHD status and configure shutdown parameters.
- 7. Supports web interface through HTTP and HTTPS.
- 8. Has the ability to send email and SMS to notify the user and device manager.
- 9. Supports scheduling shutdown, restart and battery test.
- 10. Supports batch configuration.
- 11. Supports console configuration for basic system parameters setup.
- 12. Supports 32/64 bit software programs.

#### 1.2 OS Support

Windows: XP-sp2, Vista, 7, 8 Windows 2003, 2008 Windows 2008 Server Core, Hyper-V 2008 R2 Linux OpenSUSE 11.4 Linux ubuntu 10.04 Linux Fedora 3.1.9 CentOS 5.8 Citrix XenServer 6.0.0 Linux KVM

NOTE: When using the UPS's USB port with the Windows Operating Systems the "Power Options" in the Control Panel may need to be configured.

# 2. Installation/Uninstallation

# 2.1 For Windows OS

There are two setup programs: SentryHD-MM-Setup (win32).exe and SentryHD-MM-Setup(x64).exe. One is for the 32bit Windows operating system and the other is for the 64bit Windows operating system.

# 2.1.1 Installation Process

- 1. Execute the SentryHD-MM-Setup (xxx).exe to run the setup program.
- 2. Press the "Next" button to continue with the installation or press the "Cancel" button to stop the installation.

SentryHD - InstallShield Wizard	
5	Welcome to the InstallShield Wizard for SentryHD
	The InstallShield Wizard will install SentryHD on your computer. To continue, click Next.
	<back next=""> Cancel</back>

3. Read the License Agreement and then press the "Yes" button to accept the License Agreement and continue with the installation or press the "No" button to cancel the installation.

License Agreement		
Please read the following license agreement c	carefully.	
Press the PAGE DOWN key to see the rest of t	the agreement.	
SentryHD		*
LICENSE AGREEMENT		Ξ
Minuteman grants the customer a license to us	se the software subject to the following:	
This License Agreement permits you to use or	ne copy of the Minuteman software program(s)	
included in this package on a single terminal o	connected to a single computer or a network.	
The SOFTWARE is owned by Minuteman and	l is protected by international treaty provisions and	
all other applicable national laws. Customer a	grees that it does not have any title or ownership of	-
Do you accept all the terms of the preceding Li	icense Agreement? If you select No,	
the setup will close. To install SentryHD, you r	must accept this agreement.	
allShield		
unomera -		

#### SentryHD Software

4. The destination location can be changed by pressing the "Browse" button or just press the "Next" to install the software in the default location.

SentryHD - InstallShield Wizard	×
Choose Destination Location Select folder where setup will install files.	
Setup will install SentryHD in the following folder.	
To install to this folder, click Next. To install to a diff folder.	erent folder, click Browse and select another
Destination Folder	
C\\Program Files\SentryHD\	Browse
InstallShield	
	<back next=""> Cancel</back>

5. Press the "Install" button to install the program to the selected location.

SentryHD - InstallShield Wizard	X
Ready to Install the Program The wizard is ready to begin installation.	2
Click Install to begin the installation.	
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.	
InstallShield (An An A	cel

6. The installation is in progress.

ntryHD - InstallShield Wizard	×
Setup Status	4
The InstallShield Wizard is installing SentryHD	
Removing applications	
stellShield	Canad

7. After the installation is complete, press the "Finish" button to exit the installation process.

SentryHD - InstallShield Wizard	
	InstallShield Wizard Complete The InstallShield Wizard has successfully installed SentryHD. Click Finish to exit the wizard.
	Cancel

8. Once the installation is complete, SentryHD will automatically start the service program and add an icon to the task bar. A dialog box will pop up to ask if you want to configure the basic parameters via a console. Press "No" to finish the installation and then configure the basic parameters once the software is opened or press "Yes" to launch the console configuration in the shell mode. See Chapter 3 for more details.

SentryHD - InstallShield Wizard	X
Do you want to launch the UPS-Config to con	figure the basic parameters?
	Yes No

The SentryHD software is comprised of two modules:

A **Service** module (UPS Service: UPS-Service.exe), which runs in the background as a Service and communicates with the UPS through the assigned port.

A **Status** module (UPS-Status.exe), which enables you to configure, control and monitor the software via a web browser.

After completing the installation, the setup program will create a SentryHD association with the following shortcuts:

- **Console Configure**: To launch the UPS-Config.exe for you to quickly configure the basic communication parameters.
- **Uninstall**: To remove the SentryHD program, the configuration data will still be kept in the installed directory.

- User Manual: The user manual in PDF format.
- Web Monitor: The major user interface of SentryHD, used to monitor and configure the software.

#### 2.1.2 Uninstall Process

- 1. Select Uninstall from the SentryHD program folder to start the uninstall process. Or use the Add/Remove Program in the Control Panel.
- 2. Press the "OK" button to confirm removing all of the application or the "Cancel" button to cancel the uninstall process.



3. Press the "Finish" button to complete the uninstall process.

SentryHD - InstallShield Wizard	
21	Uninstall Complete
	InstallShield Wizard has finished uninstalling SentryHD.
	< Back Finish Cancel

# 2.2 For Linux System

#### 2.2.1 Installation Process

- Please login to the Linux system and change to the root account: su root
- 2. Copy the sentryhd-mm-linux-x86.tar.gz or sentryhd-mm-linux-x64.tar.gz to the /tmp directory:

sentryhd-mm-linux-xxx.tar.gz /tmp

- Change your working directory to /tmp: cd /tmp
- 4. Uncompress the sentryhd-mm-linux-xxx.tar.gz: gunzip sentryhd-mm-linux-xxx.tar.gz
- 5. Extract the sentryhd-mm-linux-xxx.tar: tar xvf sentryhd-mm-linux-xxx.tar
- 6. Run the install script:

./install

```
+----+
| SentryHD for Linux |
| Copyright (c) 2013 Para Systems, Inc. |
| All Rights Reserved. |
+-----+
Do you want to install the SentryHD? [y|n]
```

7. Press 'y' to start the installation process:

```
+----+
| SentryHD for Linux |
| Copyright (c) 2013 Para Systems, Inc. |
| All Rights Reserved. |
+-----+
The destination directory is /usr/local/sentryhd.
Copying files ........
Install service link.
SentryHD 0:off 1:off 2:off 3:on 4:off 5:on 6:off
Starting SentryHD ... done
Do you want to configure the SentryHD right now? [y/n]
```

- 8. Now SentryHD has been installed in the following directory /usr/local/sentryhd/ and the service program will automatically start up.
- 9. Press 'y' to launch the /usr/local/sentryhd/configure program to configure the basic networking parameters for SentryHD or press 'n' to finish the installation process.

See Chapter 3 for more information about configuring the basic networking parameters.

# 2.2.2 Uninstall Process

1. Login to the Linux system and change to the root account:

su root

- 2. Change your working directory to /usr/local/sentryhd:
- cd /usr/local/sentryhd
- 3. Run the uninstall script to remove SentryHD:

./uninstall

4. Press 'y' to start the uninstall process.

# 3. Console Configuration

The configuration program is design to do the basic configuration for SentryHD in the shell mode. The software can be launched at the end of the installation process or you can go to the installed directory to launch it manually.

For Windows it is located in "C:\Program Files\SentryHD\UPS-Config.exe" For Linux it is installed in "/usr/local/sentryhd/configure"

C:\Program Files\SentryHD\U	PS-Config.exe	x
		*
		=
+	===+	
SentryHD		
111 SNMD Server Port.	161	
[1].Shir Server Port:	Enable	
[3].HTTPS:	Enable	
[4].HTTP Port:	80	
[5].HTTPS Port:	443	
[6].Manageable: [7] Sauc	Enable	
[1].3800 [8] Set Firewall		
[9].Restart SentryHD S	ervice	
[0].Exit		
Please Enter Your Choi	ce =>	~

#### 3.1 Console Menu

No.	Function	Description	Default
1.	SNMP Server Port	The UDP port for replying to the SNMP get/set commands	
2.	HTTP	Enable or disable the HTTP protocol	Enable
3.	HTTPS	Enable or disable the HTTPS protocol	Enable
4.	HTTP Port	The TCP port for HTTP	80
5.	HTTPS Port	The TCP port for HTTPS	443
6.	Manageable	Allow the management software to manage SentryHD	Enable
7.	Save	Save the configured parameters to config.ini file	
8.	Set Firewall	Insert or remove the firewall rule for the SentryHD. This option is provided for quickly testing the network communication. The firewall settings may be recovered after the OS reboots.	
9.	Restart SentryHD Service	Restart service program to apply the changes	
0.	Exit	Exit the configuration program	

# 4. Operation in Windows

After the installation, SentryHD places an icon in the task bar to indicate the status of the monitored UPS.

lcon	Description
Þ	Normal
Þ	Service stopped
•••	UPS on battery mode
1	UPS battery low
<u>چ</u>	UPS on bypass mode
<b>%</b>	UPS disconnected

To show the pop-up menu, move the cursor over the SentryHD icon and then click the mouse button:

	Web Moniter
	Property
$\checkmark$	Show Countdown
	Cancel Countdown
	Pause Notify Message
	Stop Service

#### 4.1 Web Monitor

SentryHD allows you to monitor and configure the software through the web interface.

Select the Web Monitor to launch the default web browser. If you are the Administrator then SentryHD will login to its web engine automatically. If you connect via a remote PC then you have to login with the proper account and password.

For more detailed information about the web operation, refer to the Chapter 5.

#### 4.2 Property

Selecting the Property menu provides another way to configure the basic parameters of SentryHD. From the General page you can observe the software version number, IP address, host name and the default web ports.

SentryHD - Property	ନ <mark>x</mark>
General	
System	
SentryHD	
02.01.02	
Host Information	
IP Address=	fe80::91bb:19d5:dfe8:48ec%11 192.168.168.157
Host Name=	RobertC7
	Web
	Fort= 80
	▼ HTTPS Port= 443
	Login Account
	OK Cancel

#### 4.2.1 HTTP:

The HTTP port can be enable / disabled and assigned a different number. The default value is enabled and port 80. If you have changed the HTTP port number from 80 then you have to key in the URL as follows: http://192.168.1.100:8001. Where 192.168.1.100 is the IP address of the PC where SentryHD is installed and the 8001 is the port number which you assigned.

**NOTE**: Check the Windows firewall setting if the HTTP connection is refused.

#### 4.2.2 HTTPS:

The HTTPS port can be enable / disabled and assigned a different number. The default value is enabled and port 443. If you have changed the HTTPS port number from 443 then you have to key in the URL as follows: http://192.168.1.100:4430. Where 192.168.1.100 is the IP address of the PC where SentryHD is installed and the 4430 is the port number which you assigned.

**NOTE**: Check the Windows firewall setting if the HTTP connection is refused.

# 4.2.3 Login Account:

SentryHD implements 3 levels of authentication for the web login as follows:

Administrator: Has sole right to modify the SentryHD system settings.

**Device Manager:** Does not have the rights to change the system settings, but is permitted to modify device-related settings.

**Read Only User:** Does not have the rights to change any of the system or devicerelated settings. The Read-Only User is only permitted to observe the SentryHD status.

The following is the default account and password list. **NOTE:** They are case-sensitive.

Authentication	Account	Password
Administrator	admin	password
Device Manager	device	password
Read Only User	user	password

Web Login Account	×
Administrator	
Account:	admin
Password:	•••••
Device Manager	
Account:	device
Password:	•••••
Read Only User	
Account:	user
Password:	•••••
	Save

# 4.3 Show Countdown

Select the Show Countdown menu to display the countdown window when SentryHD starts counting down for the OS shutdown delay.



# 4.4 Cancel Countdown

Select the Cancel Countdown menu during the counting down to stop the shutdown process. To resume the shutdown process, uncheck the Cancel Countdown menu item. **NOTE:** When the shutdown event changes the software will start a new countdown process.

### 4.5 Pause Notify Message

Selecting the Pause Notify Message will stop the next pop-up notification message. The notification will resume the next time the status changes.

# 4.6 Stop Service

Selecting the Stop Service menu item will stop the SentryHD service module. To restart the service, uncheck the Stop Service menu item.

# 5. Web Interface

# 5.1 Run a Web Browser

To connect to SentryHD from the same PC where SentryHD is installed, select the Web Monitor from the task bar menu. SentryHD will open your default web browser and if you are the Administrator you will be automatically logged in.

**NOTE:** SentryHD allows a maximum of 16 users to be logged in at the same time.

You can also connect to SentryHD from a remote PC. Start your Web Browser. Enter http: //host\_name or http: //ip\_address in the address bar for the plain text web transmission or https: //host\_name or https: //ip\_address for the encrypted web transmission. If you have changed the port number for HTTP or HTTPS then enter http: //host\_name:port\_number or http: //ip\_address:port\_number in the address bar for the plain text web transmission or https: //host\_name:port\_number or http: //ip\_address:port\_number or https: //host\_name:port\_number or https: //ip\_address:port\_number or https:

**NOTE:** Connecting to SentryHD from a remote PC will require you to login.

	SentryHD
User Name : Password :	admin ●●●●●●●● OK
Site II	P: 192.168.168.157

#### 5.2 Monitor >> Information >> Summary

Go to **Monitor** >> **Information** >> **Summary** to view the information about the identification, the shutdown status, the UPS status and the last 5 event logs.

**NOTE:** SentryHD will automatically logout the user if there is no data transmission for more than 30 minutes.

		N° IES 15. Inc.	()	SentryHD	💼 Home 🛛 Lo
Monitor	Devi	ce System			System Time : Wed 12/19/2012 PM (
Information	His	tory About			
Summary	0	Monitor » Information »	Summary		
Battery	0	Summary			Shutdown
In/Out/Bypass	0		Identification		Shutdown
Identification	0	Model: E750RTXL	2U Type:	Line interactive	Shutdown Type: Shutdown
Status Indication	0		Rating VA:	750 va <u>Detail</u>	OS Countdown::
ShutdownAgent	0		UPS Properties		Schedule
		UPS Communicat	ion: Normal		Next Shutdown Time:
		OPS Health:	Normal		Next Restart Time:
		Output Source:	Normal		Next Deen Batt Test Time:
		- Output Source.			Weekly Schedule
		Output Load:		33%	Specific Schedule
		Battery Status:	Normal		
		Battery Capacity:	********	100%	
		Last 5 Event Log			
		Date/Time	Event Level		Event Description
		1 12/19/2012 15:21:	43 System	Account admin login fro	om 127.0.0.1:29874
		2 12/19/2012 15:17:	32 System	IPv4-HTTP: OK IPv6-HTT	TP: OK IPv4-HTTPS: OK IPv6-HTTPS: OK
		3 12/19/2012 15:17:	32 System	IPv4-SNMP Server: OK I	Pv6-SNMP Server: OK
		4 12/19/2012 15:17:	27 System	Service program startu	p
		5 12/18/2012 16:05:	33 System	Service program is term	ninated
		L			Event Log

**Identification:** Displays the information about the UPS's Model, Type and VA Rating. **UPS Properties:** List the major UPS properties for monitoring the UPS health, output and battery status.

**Shutdown:** Displays the shutdown type (Shutdown, Power Off, Hibernate) and the countdown time to shutdown the OS (in second).

Schedule: Perform a shutdown and restart, a 10-second test or a deep battery test.

**Last 5 Event Log:** Shows the last 5 event logs if you want to see more event logs see the Event Log page.

#### 5.3 Monitor >> Information >> Battery

Go to **Monitor** >> **Information** >> **Battery** to view the information of the Battery Status, the Battery Measurement, and the Battery Replacement Date.

	D D D O G Lo G G Lo Fore Syste	est and			٢		D			🚹 Ho	me	🔁 Logout
Monitor	Devi	ce	System						System Ti	me : Wed 02/	06/20	13 AM 08:10:0
Information	His	story	About									
Summary	0	Monito	or » Information » Bat	tery								
Battery	0	Ba	ttery									
In/Out/Bypass	0			Status								
Identification	0		State	is: Norn	nal							
Status Indication	0		Test Res	ult Pase	sed							
ShutdownAgent	0		On Battery Tin	ne: O		Second(s)						
			Mea	sureme	nt							
			Battery Capac	ity:		100%						
			Volta	je: <b>41.4</b>		<i>/</i>						
			Temperatu	re: 23		°C						
			Remaining Tin	ie: 34	1	Minute(s)						
			Repla	cement [	Date							
		Las	t Battery Replacemer	t Date:								
				10	0/30/201	1 (MM/DD/YYYY)						
		Nex	t Battery Replacemer	t Date:								
				10	0/29/201	6 (MM/DD/YYYY)						

#### 5.4 Monitor >> Information >> In/Out/Bypass

Go to **Monitor** >> **Information** >> **In/Out/Bypass** to view the information of the Input, the Bypass (not applicable to all models) and the Output measurements.

	DIOGIES by Pario Systems, Inc	•	(	Sentry HD	)			合 Home	📑 Logout
Monitor	Device	System				\$	System Time	: Wed 12/19/20	12 PM 03:23:03
Information	Histor	y About							
Summary	0	Monitor » Information » In/	Out/Bypass						
Battery	0	Input			Output				
In/Out/Bypass	0	Frequency	60.0	Hz		Mea	asurement		
Identification		Voltage	122.7	v	Οι	utput Source:	Normal		
Identification						Frequency:	60.0	Hz	
Status Indication	0	Bypass				Voltage:	122.7	v	
ChutdownAgent						Current:	1.6	Α	
ShuldownAgeni	<u> </u>					Power:	204	Watt	
						Loading:	33	96	
	- 1				Outlet	Bank			
						<b>'-'</b> 1		2	

# 5.5 Monitor >> Information >>Identification

Go to **Monitor** >> **Information** >> **Identification** to view the Identification and the UPS Rating information.

	O L O G I E S Iv Pore Systems, Inc.	•	Sentry .	1D	🚹 Home	Logout
Monitor	Device	System		System T	ime : Wed 12/19/20	012 PM 03:23:24
Information	History	About				
Summary	0	Nonitor » Information » Identi	fication			
Battery	0	Identification		UPS Rating		
In/Out/Bypass	0	Model	E750RTXL2U	VA	750 va	
Identification		Type	Line interactive	Power	600 Watt	
Identification	× .	UPS Firmware:	T012_02 00	Input Voltage:	125 v	
Status Indication	0	Web Software:	02.01.02	Output Voltage:	125 v	
Obuddauradaurad				Frequency	60.0 Hz	
SnutaownAgent	0			High Transfer Voltage:	166 v	
				Low Transfer Voltage:	78 v	

# 5.6 Monitor >> Information >> Status Indication

Go to Monitor >> Information >> Status Indication to view the status of the UPS.

	DINAN DLOGIES Iv Fore Systems, Inc.	•	SentryHD	🔂 Home	📑 Logout
Monitor	Device	System		System Time : Thu 08/28/20	014 PM 02:02:56
Information	History	About			
Summary	0 1	fonitor » Information » Status	Indication		
Battery	0	Status Indication			
In/Out/Bypass	0	Economy Mode	UPS Disconnect	Output Over Voltage	
Identification		Ø Buzzer Enabled	<ul> <li>Buzzer Alarm</li> </ul>	Output Under Voltage	
Identification			Input Out Of Range	Overload	
Status Indication	0		Ø Battery Low	Over Temperature	
Obuddaum Amant			Ø Battery Depleted	Other Warning	
ShutdownAgent			Ø Battery Need Replace	Fan Abnormal	
	_		Ø Battery Ground Fault	Fuse Abnormal	
	_		Test In Progress	Inverter Abnormal	
	_		Test Fail	Charger Abnormal	
	_		Output Off	Ø Bypass Out Of Range	
	_		🥥 On Bypass	Emergency Power Off	
			OPS System Off	Phase Asynchronous	
			OPS Shutdown	Rectifier Abnormal	
			Output Breaker		

### 5.7 Monitor >> Information >> ShutdownAgent

Go to **Monitor** >> **Information** >> **ShutdownAgent** to view the information about the MM ShutdownAgents which you assigned to work with SentryHD to protect a group of servers.

	OLOGIES by Pare Systems, Lac.					🚖 Home	Logout
Monitor	Device	System			System Time	: Tue 02/05/20	13 PM 02:18:42
Information	History	About					
Summary	O M	onitor » Information »	ShutdownAgent				
Battery	0	MM ShutdownAg	nt				
In/Out/Bypass	0	IP Address	OS	Countdo (sec)	wn Reason	Last Touch (sec)	
Status Indication	0	@ 1 192.168.168.17 RobertXP	5 Microsoft Windows XP Professional Service Pack 3 (build 2600)		None	2	_
ShutdownAgent	0						

# 5.8 Monitor >> History >>Event Log

Go to **Monitor** >> **History** >> **Event Log** to view the events that occurred. The existing events are overwritten when the maximum number of entries (10,000) is reached. You can also download the entire event log file (event\_log.csv).

E C H N O L O C			( S			
r Dev	rice Syst	em		System Time	: Thu 12/20/20	012 AM 08
tion H	istory Abo	ut				
0	Monitor » Histo	ory » Event Log	» Page1			
0	Event Log	,				
0	Page	<< 1 2	>>		Downlo	ad All
	© From 1	12/20/2012 (MM	DD/YYYY) To 12/	20/2012 (MM/DD/YYYY) Apply		
	Date	Time	Level	Event Log		
	12/20/2012	08:48:05	System	Account admin login from 127.0.0.1:23989		
	12/20/2012	00:27:33	Warning	Power restore		
	12/20/2012	00:27:27	Warning	No longer on battery mode		
	12/20/2012	00:27:26	Information	No longer discharging from battery		
	12/20/2012	00:27:23	Warning	On battery mode		
	12/20/2012	2 00:27:23	Warning	Power fail		
	12/20/2012	2 00:27:17	Information	Battery is discharging		
	12/19/2012	15:59:36	System	Account admin login from 127.0.0.1:36786		
	12/19/2012	15:30:59	Warning	Power restore		
	12/19/2012	15:30:53	Warning	No longer on battery mode		
	12/19/2012	15:30:52	Information	Stop countdown shutdown		
	12/19/2012	15:30:52	Information	No longer discharging from battery		
	12/19/2012	15:30:45	vvarning	Countdown to snutdown US in 04:59 second(s)		
	12/19/2012	15:30:45	vvarning	On battery mode		
	12/19/2012	15:30:45	vvarning	Power tail		
	12/19/2012	15:30:41	Information	Battery is discharging		
	12/19/2012	15.30.37	vvarning	Power restore		
	12/19/2012	10.30.33	Information	Stop Countdown Shutdown		
	12/19/2012	10.30.33	Warning	No longer on battery mode		
	12/10/2012	15:30:26	Warning	Countdown to shutdown OS in 04:59 second(e)		
	12/19/2012	15:30:20	Warning	On hattery mode		
	12/19/2012	15:30:26	Warning	Power fail		
	12/19/2012	15:30:23	Information	Battery is discharging		
	12/19/2012	15:21:43	System	Account admin login from 127.0.0.1:29874		
	12/19/2012	15:17:32	System	IPv4-HTTP: OK IPv6-HTTP: OK IPv4-HTTPS: OK IPv6-H	TTPS: OK	
	12/19/2012	15:17:32	System	IPv4-SNMP Server: OK IPv6-SNMP Server: OK		
	12/19/2012	15:17:27	System	Service program startup		
	12/18/2012	16:05:33	System	Service program is terminated		
	12/18/2012	14:00:15	System	Account admin login from 127.0.0.1:15022		
		12/19/2012 12/19/2012 12/19/2012 12/19/2012 12/19/2012 12/18/2012 12/18/2012	12/19/2012         15:21:43           12/19/2012         15:17:32           12/19/2012         15:17:32           12/19/2012         15:17:32           12/19/2012         15:17:32           12/19/2012         15:17:32           12/19/2012         15:17:32           12/19/2012         16:05:33           12/18/2012         14:00:15	L112/12/2012         15:21:43         System           12/19/2012         15:21:43         System           12/19/2012         15:17:32         System           12/19/2012         15:17:32         System           12/19/2012         15:17:32         System           12/19/2012         15:17:27         System           12/19/2012         16:07:33         System           12/18/2012         14:00:15         System	12/19/2012         15:21:43         System         Account admin login from 127.0.0.1:29874           12/19/2012         15:17:32         System         IPv4-HITP: OK IPv6-HITP: O	Display         Display <thdisplay< th=""> <thdisplay< th=""> <thd< td=""></thd<></thdisplay<></thdisplay<>

Date: The date when the event occurred.

Time: The time when the event occurred.

Level: The Event Level of the event occurred.

**Event Log:** The description of the event that occurred.

**Download All:** Download the entire event log file in csv format.

SentryHD sends a request to the UPS, collects the event logs saved in the UPS, and displays them in the event log. Please note that this option only appears when the UPS supports this function, and the event logs saved in the UPS may be different from the event logs saved in the SentryHD.

#### 5.9 Monitor >> History >>Data Log

Go to **Monitor** >> **History** >> **Data Log** to view the history values for a single day, a month, a year and a user defined period of time. You can also download the history data by clicking the "Download" button.



#### 5.9.1 Observe by Day

Click on the **Day** tab to view the history values for a specific day.

**Date Text Box:** Click on the Date text box to pop-up a calendar to pick a date to view the history values for the connected UPS.

**Line Chart:** Each line color indicates a different item's value. Move your cursor over the line to display the time and associated value.

**Color Boxes:** Click on the color boxes to disable the line, click them again to enable the line.

**Download:** Exports the data log to a csv file.

#### 5.9.2 Observe by Month

Click on the **Month** tab to view the history values for a specific month.

**Date Text Box:** Click on the Month text box to pop-up a calendar to pick a month to view the history values for the connected UPS.

**Line Chart:** Each line color indicates a different item's value. Move your cursor over the line to display the time and associated value.

**Color Boxes:** Click on the color boxes to disable the line, click them again to enable the line.

**Download:** Exports the data log to a csv file.

#### 5.9.3 Observe by Year

Click on the Year tab to view the history values for a specific year.

**Year Text Box:** Click on the Year text box to pop-up a calendar to pick a year to view the history values for the connected UPS.

**Line Chart:** Each line color indicates a different item's value. Move your cursor over the line to display the time and associated value.

**Color Boxes:** Click on the color boxes to disable the line, click them again to enable the line.

**Download:** Exports the data log to a csv file.

#### 5.9.4 Observe by User Defined

Click on the Specific tab to view the history values for a specific period of time. **Date Text Box:** Click on the Date text box to pop-up a calendar to pick a range of days then press the Apply button to view the items for the connected UPS.

**Line Chart:** Each line color indicates a different item's value. Move your cursor over the line to display the time and associated value.

**Color Boxes:** Click on the color boxes to disable the line, click them again to enable the line.

**Download:** Exports the data log to a csv file.

#### 5.10 Monitor >> History >>Configure

Go to **Monitor** >> **History** >> **Configure** to clear the history data logs and event logs. You can also assign the Save Data Interval.

	NOLOGIES by Fore Systems, Inc.				<table-cell-rows> Home</table-cell-rows>	Logout
Monitor	Device	System		System Time :	Wed 12/19/201	12 PM 03:28:05
Information	History	About				
Event Log	O Mo	nitor » History » Co	nfigure			
Data Log	0	History Data		Event Log		_
Configure	<b>O</b>	Clear History Dz Data Storage: 12 Apply Auto Export Auto Export Auto File Na C:\Program Fil Apply	month(s) me:UPS.csy) Les\SentryHD\Report\ .ff	Clear Event Log Maximum event log entry: 10000		

Clear Event Log: Clears all of the data logs.

Data Storage: Assign the number of months you want to save the data log.

Auto Export: Saves the data log in the specified directory at the assigned interval.

The software creates the "UPS.csv" file to export the data.

Interval: The interval to append the UPS data to the file.

Path Name: The directory where data file will be exported to.

#### 5.11 Monitor >> About Information

Go to **Monitor** >> **About** >> **Information** to view the information about the Host computer and SentryHD.



# 5.12 Device >> UPS >>Configure

Go to **Device** >> **UPS** >> **Configure** to configure the UPS. The configuration values are saved in the UPS or in SentryHD and these values change the operation of the UPS. The configuration items include the following.

	H N O L O G I E S by Fore Systems, Inc.		🔂 Home 🚦	🔄 Logout
Monitor	Device	System	System Time : Thu 08/28/2014	PM 02:00:48
UPS	Management	Notification		
Configure	D	evice » UPS » Configure		
Control	0	Configure		
Event Level	0	Select UPS Configuration: Auto-Restart UPS Buzzer Low Battery Battery Replacement Date External Battery Pack Economy Mode	Economy Mode: C Enable	

**NOTE:** Different UPSs support different configuration options.

Auto Restart: After you click Submit to confirm your auto restart setup, the SentryHD will send the command to the UPS to enable auto restart. The default value is enable. **UPS Buzzer:** After you click Submit to confirm your buzzer setup, the SentryHD will send the command to the UPS to enable buzzer. The default value is enable.

**Low Battery:** This configuration saves the setup values in the SentryHD and compares with the values received from the UPS. If the received battery level is lower than the assigned one, the SentryHD will trigger a low-battery alarm. The default value is disabled.

**Battery Replacement Date:** After you set up the battery replacement dates, the SentryHD will send the command to the UPS and save the information in the UPS. The user can define how many days in advance that the want to be notified of the Next Battery Replacement Date. The default values are enable and 60-days.

**External Battery Pack:** After you click Submit to confirm the number of External Battery Packs that are connected to the UPS, SentryHD will send the command to the UPS and save the information in the UPS. The default value is 0 (except for the ED5-20KVA UPS series, which the default value is 1).

**NOTE:** The correct number of External Battery Packs must be selected so that the UPS and SentryHD will report the proper Estimated Runtime.

**Outlet Banks:** This option is for the "Load Shedding" function. The user can turn off Bank 1 or Bank 2 whichever has the non-mission critical equipment connected to it. Turning off this outlet bank can extend the battery backup time for the mission critical equipment.

**Economy Mode:** Configure the UPS to operate in the Economy mode. See the UPS user's manual for the Economy mode operation.

# 5.13 Device >> UPS >>Control

Go to **Device** >> **Management** >> **Control** to configure the control commands. After you click Submit, SentryHD will send the commands to the UPS to enable the functions. The control items include the following:

POWER TEC	H N O L O G I E S by Fore Systems, Inc.	•		🔂 Home	Logout
Monitor	Device	System	e	Bystem Time : Wed 12/19/20	012 PM 03:32:17
UPS	Management	Notification			
Configure	0	Device » UPS » Control			
Control	0	Control			
Event Level	0	Select UPS Control: Battery Test Outlet Control Buzzer Mute	Battery Test Battery Test Type: 10-seconds Tes Submit Description: Send the command to the UPS to perf	form the battery test.	

**Battery Test:** After you select the battery test type and click Submit SentryHD will send the command to the UPS to perform the selected battery test.

**Outlet Control:** Press the Switch Bank button to control the UPS outlet banks to turn them off or turn them on.

**Buzzer Mute:** The UPS's buzzer/alarm can be silenced while the UPS is operating in the Battery Mode. Once the UPS reaches a Low Battery Warning the buzzer/alarm will be turned back on and cannot be silenced during this period. If the UPS switches back to the AC Normal Mode the buzzer/alarm will be reset. Once another power failure occurs the buzzer/alarm will sound. The buzzer/alarm cannot be silenced during fault conditions.

#### 5.14 Device >> UPS >>Event Level

Go to **Device** >> **UPS** >> **Event Level** to set up different event levels. If you want to receive an event notification, refer to **Notification - SNMP Trap** and **Notification - Mail Server.** 

POWER TEC	COMAN HNOLOGIES Jo Pare Systems, Inc.		🔂 Home	Dogout 🕞
Monitor	Device	System	System Time : Wed 12/19/20	12 PM 03:32:36
UPS	Management	Notification		
Configure	0	levice » UPS » Event Level		
Control	0	Event Level		1
Event Level	0	Event Over temperature Level: Alarm		
		Event Description	Level	
		1         Over temperature           2         Recover from over temperature           3         Power restore           4         Power restore           5         Output abnormal           6         Recover from overtoad           9         Bypass abnormal           10         Recover from overtoad           9         Bypass abnormal           11         Turn UPS output off           12         Turn UPS output off           13         UPS shutdown           14         Recover from UPS shutdown           15         Charger back to normal           16         Charger back to normal           17         UPS system off           18         UPS system off           19         Fan fail           21         Recover from fuse fail           22         Recover from general fail           23         UPS general fail           24         UPS recover from general fail           25         Waiting for the input power return	Alarm Alarm Warning Warning Warning Alarm	
		27 UPS sound down to shutdown     28 UPS no longer count down to shutdown     29 UPS is shutting down	Alarm Alarm Warning	
		30 UPS buzzer is alraming     32 UPS buzzer is alraming     33 UPS is in the economic mode     34 No longer in the economic mode     35 Inverter abnormal     36 Inverter back to normal     37 Emergency nove off	Warning None Information Information Warning Warning Warning	
		Recover from emergency power off     UPS buzzer is disabled     UPS buzzer is enabled	Warning Warning Information Information	

#### 5.15 Device >> Management >> Communication

Go to **Device** >> **Management** >> **Communication** to select the appropriate communications port to communicate with the UPS. The default value is Auto. SentryHD will detect the connected UPS automatically and keep this information in the configuration file.

		E S			D	<mark>合</mark> Home	🔄 Logout
Monitor	Devic	e	System			System Time : Wed 02/06/20	013 PM 12:45:47
UPS	Manageme	nt [	Notification				
Communication	0	Device »	Management >	Communication			
Configure	0	Com	munication		_		
Control	0	COM	Port:	Auto 💌			
Weekly Schedule	0			Submit			
Specific Schedule	0						

#### 5.16 Device >> Management >> Configure

Go to **Device** >> **Management** >> **Configure** to configure the major functions, they are: Shutdown, Reaction, Execute an External Command and Manageable.

			🔒 Home	📑 Logout
Monitor	Devi	ce System System Time : W	ed 12/19/20	12 PM 03:33:27
UPS	Managem	ent Notification		
Communication	0	Device » Management » Configure		
Configure	0	Shutdown		
Control	0	OS Shutdown Type: Shutdown 👻		
Weekly Schedule	0	UPS Shutdown Delay. 120 second(s) Period: 0 second(s)		
Specific Schedule	0	Enable Event OS Shutdown Delay (in seconds)		
		1       Image: Power Fail       300       second(s)         2       Image: Battery Low       30       second(s)         3       Image: Schedule Shutdown       300       second(s)         Schedule Shutdown         Image: Schedule Shutdown       300       second(s)         Image: Schedule Shutdown       120       second(s)         Image: Schedule Shutdown:       120       second(s)         Image: Submit       Image: Submit       Image: Submit         Image: Submit       Image: Submit       Submit		

**Shutdown:** Select the Shutdown Type to determine the best way to shutdown the operating system. The options are Shutdown, Power Off and Hibernate. The default value is Shutdown. Select the event that will trigger the Shutdown action and enter the amount of time it will take the OS to shutdown. If the event recovers during the countdown then the shutdown process will be cancelled, the host will not be shutdown.

**Reaction:** Enable the Notify Message to pop-up a message box once an event occurs. Assign the period value to report the message periodically, setting a 0 as the value will pop-up the message only once.

Enable the Execute Command File to run an assigned external file before shutting down. Set a time value to the Run Before Shutdown to inform SentryHD when to launch the assigned executable file.

**Manageable:** Select Allow the SentryHD to be managed by an authenticated manager option to let SentryHD reply to queries from any authenticated manager. The authenticated manager can be a centralized management software. The authenticated manager can provide a comprehensive list of all of the SentryHDs and ShutdownAgents.

The authenticated manager communicates with SentryHD through SNMPv3 with the first default account in the SNMPv3 USM list. If the Allow the SentryHD to be managed by an authenticated manager option is enabled, then the permission of manager account changes to "Read/Write", otherwise the permission is Disable. The default setting of Allow the SentryHD to be managed by an Authenticated Manager option is enabled.

### 5.17 Device >> Management >> Control

Go to **Device** >> **Management** >> **Control** to configure the major functions, they are: Local Control, Remote Control, and Forward Simulation Trap.

Monitor	Device	System	System Time : Wed 12/19/2012 PM 03:3
UPS	Management	Notification	
Communication	O D	evice » Management » Control	
Configure	0	Local Control	Forward Simulation Trap
Control	0	Cancel Countdown	Power Fail Power Restore
Weekly Schedule	0	Pause Notify Message	Note: The forward simulation trap will send the related trap of
Specific Schedule	0	Note: The Pause Notify Message will stop the pop up messages until the next time the status changes.	UPSv4 MIB to the assigned <u>SNMP Trap List</u>
		Remote Control	1
		Cancel Shutdown	
		Note: Send the Cancel Shutdown SNMP trap to the assigned target hosts.	

**Local Control:** Press the "Cancel Countdown" button during the countdown shutdown process to stop the countdown. Press the button again to resume the shutdown process. In addition to selecting the Resume Countdown menu item to continue the countdown process, it will also start a new countdown process.

Press the "Pause Notify Message" to pause the notification message. The message will resume when the UPS status changes.

**Remote Control:** Press the "Cancel Shutdown" button to send the Cancel Shutdown trap to all of the target SNMP hosts to stop the shutdown process.

**Forward Simulation Trap:** Press the "Power Fail" button to send the simulated power fail SNMP trap to the assigned targeted IP addresses.

Press the "Power Restore" button to send the simulated power restore SNMP trap to the assigned targeted IP addresses.

#### 5.18 Device >> Management >> Weekly Schedule

Go to **Device** >> **Management** >> **Weekly Schedule** to arrange a weekly schedule for the UPS. You can select No Action, Shutdown, Restart, 10-Second Test, and set up the day and the time you want the action to be executed.

**NOTE**: The priority of a specific schedule is higher than the weekly schedule.

	NOLOGI Le Fare System	e Inc.			<b>Se</b>	ntry	HD					🔒 Home	📑 Logo
Monitor	Devic	e i	System							Sy	stem Tim	e : Wed 12/19/20	12 PM 03:
UPS	Manageme	nt   I	Notification										
Communication	0	Device » I	Management » Wee	kly Sch	edule								
Configure	0	Week	dy Schedule										
Control	0	1	Action		SUN	MON	TUE	WED	THR	FRI	SAT	Time	
Weekly Schedule	0	1	10-Seconds Test	•				$\checkmark$				06:00	
Specific Schedule	_	2	Shutdown	•						1		17:00	
opedite ochedule		3	Restart	▼		1						05:00	
	- 1	4	No Action	•								00:00	
	- 1	5	No Action	▼								00:00	
	- 1	6	No Action	•								00:00	
	- 1	7	No Action	•								00:00	
	- 1	8	No Action	•								00:00	
	- 1					Su	ıbmit						

# 5.19 Device >> Management >> Specific Schedule

Go to **Device** >> **Management** >> **Specific Schedule** to arrange a specific schedule for the UPS. You can set up a specific date (MM/DD/YYYY) and time (hh:mm) for a specific action (Stop Action, Shutdown, Restart, 10-Second Test, Deep Battery Test) to be performed. **NOTE**: The priority of a specific schedule is higher than the weekly schedule.

		0		Sentry HD	🔂 Home	🔄 Logout
Monitor	Device	Syst	tem		System Time : Wed 12/19/2	012 PM 03:36:52
UPS	Management	Notif	ication			
Communication	0	Device » Mana	agement » Specific Schedu	le		
Configure	0	Specific	Schedule			
Control	0		Date(MM/DD/YYYY)	Time(hh:mm)	Action	
Weekly Schedule	0	1	00/00/2000	00:00	Stop Action 🔻	
Cassifia Cabadula		2	00/00/2000	00:00	Stop Action 💌	
specific schedule	, 0	3	00/00/2000	00:00	Stop Action 🔻	
	- 1	4	00/00/2000	00:00	Stop Action 💌	
	- 1	5	00/00/2000	00:00	Stop Action 🔻	
	- 1	6	00/00/2000	00:00	Stop Action 👻	
	- 1	7	00/00/2000	00:00	Stop Action 👻	
	- 1	8	00/00/2000	00:00	Stop Action 👻	
	- 1	9	00/00/2000	00:00	Stop Action 👻	
	- 1	10	00/00/2000	00:00	Stop Action 👻	
	- 1	11	00/00/2000	00:00	Stop Action 👻	
	- 1	12	00/00/2000	00:00	Stop Action 👻	
	- 1	13	00/00/2000	00:00	Stop Action 🔻	
		14	00/00/2000	00:00	Stop Action 👻	
	- I.	15	00/00/2000	00:00	Stop Action 👻	
		16	00/00/2000	00:00	Stop Action 👻	
				Submit		

#### 5.20 Device >> Notification >> SNMPv1 Access

Go to **Device** >> **Notification** >> **SNMPv1** Access to configure the SNMPv1 access. SentryHD supports SNMP protocol and SNMP NMS (Network Management System), which are commonly used to monitor network devices. To prevent unauthorized access you can specify the NMS IP addresses, their community strings and access levels. The maximum number of IP entries is 255.

POWER TECH	UNAN NOLOGIES by Pare Systems, Inc.			yHD	🔂 Home	🔁 Logout
Monitor	Device	System			System Time : Tue 02/05/20	13 PM 02:21:3
UPS	Management	Notification				
SNMPv1 Access	• D	evice » Notification » \$	SNMPv1 Access			
SNMPv3 USM	0	SNMPv1 Access	[able			
SNMP Trap	0	SNMP Port: 161 Submit	Download MIB: SentryHD			
lail Server	0					
SMS	0	Access IP Community	192.168.168.175 public	Access	s to be received from any host.	IMP'
Wake On LAN	0	Permission	Read Only  Add Update Delete			
			IP Address	Community	Permission	
		1	192,168,168,175	public	Read Only	

#### 5.21 Device >> Notification >> SNMPv3 USM

Go to **Device** >> **Notification** >> **SNMPv3 USM** to configure the SNMPv3 access. SNMPv3 offers features such as the encryption of packets and authentication to improve security. The SNMPv3 USM (User Session Management) allows you to assign 32 User Names whose access is granted via SNMPv3 protocol. You can also define their respective Security Levels, Auth Passwords, Priv Passwords and Permission. The first account cannot be deleted, to disable it go to the **Device** >> **Management** >> **Configure** page and then uncheck the manageable option.

UPS       Management       Notification         SNMPV1 Access       Device » Notification » SNMPv3 USM         SNMPV3 USM       SNMPv3 USM         SNMP Trap       Context Name: cn1027 Auth Protocol: MD5         Mail Server       Submit	
SNMPv1 Access     Device » Notification » SNMPv3 USM       SNMPv3 USM     SNMPv3 USM       SNMP Trap     Context Name: cn1027 Auth Protocol: MD5       Ath Protocol: MD5     Priv Protocol: CBC-DES	
SNMPv3 USM     SNMPv3 USM       SNMP Trap     Context Name: cn1027       Aail Server     Submit	
Ail Server Context Name: cn 1027 Auth Protocol: MD5 Priv Protocol: CBC-DES	
Aail Server	
MS User Name: manager Security Level: Auth, Priv -	
Vake On LAN O Auth Password: ******** Priv Password: ******** Permission: Read/Write	
Add	

### 5.22 Device >> Notification >> SNMP Trap

Go to **Device** >> **Notification** >> **SNMP Trap** to configure the SNMP Traps. To enable the SNMP Traps, you must add the Target IP addresses to the Target IP list. Specify the Community String, Trap Type, MIB, SNMPv3 User Name (If the Trap Type is SNMPv3), UDP port, and Event Level. To update or delete a Target IP address, select the IP address in the Target IP list, and click Update or Delete. You can add up to 255 Target IP addresses in the list.

UPS     Management     Notification       SNMPV1 Access     O       SNMPV3 USM     O       SNMP Trap     O       Mail Server     O         Target IP:     192.168.168.175       Community String:     public       Trap Type:     SNMPV1	
SNMPv1 Access     Device » Notification » SNMP Trap       SNMP V3 USM     SNMP Trap Target List       SNMP Trap     Target IP: 192.168.168.175       Kall Server     MIB: UPSv4 ▼	
SNMP Trap Target List SNMP Trap O Mail Server O Mail Server Trap Type: SNMP/1   SNMP	
SNMP Trap     Target IP:     192.168.168.175     Community String:     public       Mail Server     Trap Type:     SNMPV1 •     MBB:     UPSv4 •	
Mail Server O Trap Type: SNMPv1   MIB: UPSv4	
Dead Tree Ores - Tree Bat 460	
SMS O SNMPv3 User Name: Event Level: MM ShutdownAgent	
Wake On LAN O The SNMPv3 User Name must be the same as the User Name in the <u>SNMPv3 USM</u> table. SNMP Port for ShutdownAgent 161	
Add Update Delete	

You can select which event notifications should be sent to the Target IP addresses. **Event Level:** Three Event Levels are listed as follows:

**Information:** All event notifications are sent to the target IP address.

**Warning:** Both Warning and Alarm event notifications are sent to the target IP address.

Alarm: Only Alarm event notifications are sent to the target IP address.

Go to **Device** >> **Management** >> **Event Level** to change the event level.

**MM ShutdownAgent:** All of the power events will be sent to the assigned MM ShutdownAgent. SentryHD will collect all of the MM ShutdownAgent information via the SNMPv3 "manager" account and then display them in the **Monitor** >> **Information** >> **ShutdownAgent** page.

**NOTE**: SentryHD provides SNMPv1, SNMPv2c and SNMPv3 traps. If you use the SNMPv3 trap, the SNMPv3 USM table must be configured.

#### 5.23 Device >> Notification >> Mail Server

Go to **Device** >> **Notification** >> **Mail Server** to configure the email notifications. The user can set up the SMTP Server and the email receiver so the designated recipient can receive the email notification from SentryHD whenever an event occurs.

	H N O L O G I E S by Fare Systems, Inc.	Sentry HD	🔂 Home 🛛 Logou
Monitor	Device	System	System Time : Tue 02/05/2013 PM 02:2
UPS	Management	Notification	
SNMPv1 Access	0	evice » Notification » Mail Server	
SNMPv3 USM	0	Mail Server Configuration	
SNMP Trap	0	SMTP Server Name or IP: xzzy.minutemanups.com (51 bytes max.)	The Account and Password are not
Mail Server	0	SMTP Server Port. 25	required to send emails.
SMS	0	Account admin (32 bytes max.)	
Wake On LAN	0	Password: (16 bytes max.)	
		Mail List	
		Receiver: support@minutemanups.com Event Level: Information	
		Receiver	Event Level
		1 support@minutemanups.com	Information

**SMTP Server:** This is the hostname of the SMTP Mail Server used to send the email message from SentryHD.

Account: The SMTP server login account (Not required).

Password: The SMTP Server login password (Not required).

Add, Update, and Delete: Add, update or delete a receiver.

#### 5.24 Device >> Notification >> SMS

Go to **Device** >> **Notification** >> **SMS** to configure the SMS parameters. To send the SMS message to your mobile phone, a GSM modem must be connected to your computer through a RS232 COM port. SentryHD will send the SMS through AT command by PDU format. Any GSM modem that supports the following three AT commands will work with SentryHD:

AT AT+CMGF AT+CMGS

**GSM Modem:** Assign a COM port and the Baud Rate for the GSM modem. **Mobile Phone Number:** Add, edit or delete the mobile phone numbers in the list.

POWER TEC	H N O L O G I E S br Pare Systems, Inc.	Sentry#D	🔂 Home 🗖 Logout
Monitor	Device	System	System Time : Wed 12/19/2012 PM 03:47:2
UPS	Management	Notification	
SNMPv1 Access	0	Device » Notification » SMS	
SNMPv3 USM	0	GSM Modem	
SNMP Trap	0	COM Port: Disable 🔻	Baud Rate: 2400 🔻
Mail Server	0	Submit	
		Mobile Phone Number	er
SMS	0	Phone Number:	
Wake On LAN	0	Event Level: None  Add	
		Mobile Phone Number	Event Level
		1	None

#### 5.25 Device >> Notification >> Wake On LAN

Go to **Device** >> **Notification** >> **Wake On LAN** to configure the parameters to start up client PCs through the network using their MAC address. The maximum is 256 MAC addresses. This configuration can wake up client PCs after the power is restored or SentryHD starts up

	H N O L O G I E S by Fore Systems, In	5		7		🔒 Home 🛛 Lo
Monitor	Device	System			System Time :	Wed 12/19/2012 PM (
UPS	Management	t Notification				
SNMPv1 Access	0	Device » Notification » Wa	ke On LAN			
SNMPv3 USM	0	WOL Host List				
SNMP Trap	0		Title: None			
lail Server	0	MAC (xx-x	x-xx-xx-xx): 00-00-00-00-00 Delay: 0 minute(s)			
SMS	0	Wake L	Ip Condition: Power Restore	System Startup		
Wake On LAN	0		Add			
	_	Title	MAC	Delay	Restore	Startup
		1 None	00-00-00-00-00-00	0	No	No

#### 5.26 System >> Administration >> Information

Go to **System** >> **Administration** >> **Information** to assign the system information for SentryHD, including the Installation Date, the Location and a Description.

	OLOGIE by Parie Systems,	<b>V.</b> 5	Sentry HD	🔂 Home 🛛 Logout
Monitor	Device	e System		System Time : Wed 12/19/2012 PM 03:48:23
Administration				
Information	0	System » Administration » In	formation	
Login User	0	Information		
Web	0	System Name	SentryHD	
Batch Configuration	0	System Contactor	Para	
		System Location	RPC	
	- 1	Installation Date	12/18/2012 (MM/DD/YYYY)	
	- 1	Description	Battery Backup	
	- 1		Submit	
	- 1			

#### 5.27 System >> Administration >> Login User

Go to **System** >> **Administration** >> **login User** to manage the login authentication for the web interface by assigning 3 different levels of user accounts.

The access permission for the account types are listed as follows:

Administrator: Permitted to modify all settings.

Device Manager: Permitted to modify device-related settings.

Read Only User: Only permitted to view the SentryHD status.

	EN CLASSING			S			🔂 Home	Logout	
Monitor	Devic	e S	ystem					System Time : Wed 12/19/20	012 PM 03:49:32
Administration									
Information	0	System » /	Administratio	n » Login User					
Login User	0	User M	lanager						
Web	0	1	Priv	ilege		Account Name (16 chars max.)		Password (16 chars max.)	
Batch Configuration	0	1	Admir	istrator		admin		•••••	
	- 1	2	Device	Manager		device		•••••	
	- 1	3	Read C	Inly User		user		•••••	
	- 1					Submit			

# 5.28 System >> Administration >> Web

Go to **System** >> **Administration** >> **Web** to configure the HTTP/HTTPS communication protocols available in SentryHD.

	O L O G I E S by Fare Systems, Inc	•	Sentry HD	🔂 Home 🔄 Logout
Monitor	Device	System		System Time : Wed 12/19/2012 PM 03:50:01
Administration	0	System » Administratio	n » Web	
Login User	0	Configure Web		SSL Certificate
Web Batch Configuration	0	HTTP: HTTPS: HTTP Port HTTPS Port	<ul> <li>Enable</li> <li>Disable</li> <li>Enable</li> <li>Disable</li> <li>Attach</li> </ul>	Certificate File (PEM format): Browse Update the certificate file, which is generated by opensal for the new SSL connection.
		Web Refresh Period:	3 Seconds	Submit

HTTP: Enabling or disabling the HTTP connection with SentryHD.

HTTPS: Enabling or disabling the HTTPS connection with SentryHD.

**HTTP Port:** The HTTP port can be changed to a different port instead of the standard HTTP port (80).

**HTTPS Port:** The HTTPS port can be changed to a different port instead of the standard HTTP port (443).

**Web Refresh Period:** The time period to refresh the web pages. The range is 1~9999 seconds.

**SSL Certificate:** To ensure a secure connection between SentryHD and the connected workstation, an SSL certificate can be used to encrypt and secure the integrity of transmitting data.

**Certificate File:** This allows you to replace your own SSL certificate file. SentryHD supports PEM format which is generated by OpenSSL. Click Choose File to upload a certificate file.
## 5.29 System >> Administration >> Batch Configuration

Go to **System** >> **Administration** >> **Batch Configuration** to perform batch configurations. SentryHD provides batch configuration to allow quick and effortless setup on multiple SentryHD hosts. You can duplicate settings by downloading the configuration file from the SentryHD that you have successfully configured, and upload the configuration files on other hosts.

**Download:** Download the config.ini for you to store or edit the configuration file. **Upload:** Upload the configuration file to SentryHD to apply the changes.

		Sentry	🚹 Home 🛛 Logout
Monitor Administration	Device	System	System Time : Wed 12/19/2012 PM 03:50:18
Information	0	System » Administration » Batch Configuration	
Login User	0	System Configuration	
Web	0	Configuration File: Download	
Batch Configuration	0	Browse         Upload           DescriptionThe batch configuration is used to configure all of the system parameters at one time. Please follow the following steps to complete the process:           Step 1         Press the Download button to download the configure. init file which includes all of the system parameters.           Step 2         Please follow the file format, there must be a [Section] before the item_name=item_value. And the last line must be the [End] section.	
		Step 3     Edit the configure. Ini file by the text edit software. Remove the items which you don't want to be changed, just leave the items which you want to configure.       Step 4     Select the modified configure. Ini file and press the Upload button to upload the file.       Step 5     Wait for about 10 seconds for the system to update the changes.	

# 6. 2008 Server Core Setup for SentryHD

While installing SentryHD in the 2008 server core, it requires the following commands to transfer the file and add some rules for firewall.

1. Disable firewall:

netsh advfirewall set allprofiles state off

2. Enable firewall:

netsh advfirewall set allprofiles state on

- 3. Add a remotely shared directory: net use e: \\<ip address>\e
- Open the SNMP Trap UDP 162
   netsh advfirewall firewall add rule name="SNMPTrap" protocol=UDP dir=out localport=162 action = allow
- Open SNMP Server UDP 161
   netsh advfirewall firewall add rule name="SNMPServer" protocol=UDP dir=in localport=161 action = allow
- 6. Open the HTTP TCP 80

netsh advfirewall firewall add rule name="HTTP" protocol=TCP dir=in localport=80 action = allow

Open HTTPS TCP 443
 netsh advfirewall firewall add rule name="HTTPS" protocol=TCP dir=in localport=443 action = allow

First, put the SentryHD-Setup(x64).exe setup file in the 2008 server directory. If there is no CD-ROM you can set the "Disable firewall" command, "Add a remotely shared directory" command then copy the file from your PC to the 2008 server. Don't forget to set the "Enable firewall" command when finished.

Second, follow Chapter 2 to install SentryHD in the 2008 server.

The last step is to use the open HTTP/HTTPS, SNMP Trap/Server port commands to open the necessary ports.

You can run the UPS-Config.exe to configure the basic networking parameters for the web and SNMP network protocols after installation.

C:\Program Files\SentryHD\U	PS-Config.exe	*	
			A
			=
+	===+		
SentryHD			
[1] SNMP Server Port:	161		
[2].HTTP:	Enable		
[3].HTTPS:	Enable		
[4].HTTP Port:	80		
[5].HTTPS Port:	443		
[6].Manageable: [7] Souc	Enable		
[1].3dVe [8] Set Firewall			
[9].Restart SentruHD S	ervice		
[0].Exit			
Please Enter Your Choi	ce =>		-

Select number [8] to configure the firewall for SentryHD.

C:\Program Files\SentryHD\UP	S-Config.exe	
		< III
+	===+	
I SentryHD		
+=============================	===+	
<pre>[1].SNMP Server Port:</pre>	161	
[2].HTTP:	Enable	
[3].HTTPS:	Enable	
[4].HTTP Port:	80	
[5].HTTPS Port:	443	
[6].Manageable:	Enable	
[7].Save		
[8].Set Firewall		
[9].Restart SentryHD S	ervice	
[0].Exit		
Please Enter Your Choi	ce = > 8	
We II help to insert of	r remove the firewall rules of SentryHD for you,	
Do you want to insert o	or remove the firewall? [I]hsert, [K]emove	
Please Enter Your Choi		_
		· ·

# 7. XenServer Setup for SentryHD

To install SentryHD in the Citrix XenServer, see 2.2 For Linux in Chapter 2 Installation/Uninstallation. To configure the basic networking parameters including the firewall, see Chapter 3 Console Configuration.

## 7.1 Install PV driver for Guest OS

To shutdown the guest OS from XenServer, the PV driver must be installed on all of the guest OSes for them to properly shutdown.

## 7.2 Configure SentryHD for Xen

Enter the estimated time for all of the guest OSes that operate on the XenServer server to properly shutdown.

- 1. Login to the web interface of SentryHD. The account level should be equal to or greater than the device manager.
- 2. Go to the **Device** >> **Management** >> **Configure** page and fill in the estimated time in the Run Before Shutdown field of the Reaction group.
- 3. Enter /user/local/sentryhd/command/command.Xen script file to shutdown the guest OSes. Then check the Execute Command File checkbox to enable the shutdown of the guest OSes.

Monitor	Device	System	System Time : Thu 02/07/2013 PM 02
UPS	Management	Notification	
communication	0	levice » Management » Configure	
onfigure	0	Shutdown	Reaction
ontrol	0	OS Shutdown Type: Shutdown 🔻	✓ Notify Message
/eekly Schedule	0	UPS Shutdown Delay: 120 second(s)	Period: 0 second(s)
pecific Schedule	0	Enable Event OS Shutdown Delay (in seconds)	Execute Command File
	_	1 V Power Fail 300 second(s)	/usr/local/sentryhd /command/command.Xen
		2 Sattery Low 30 second(s)	
		3 Schedule Shutdown 300 second(s)	File:
		Schedule Shutdown	Run before Shutdown: 120 second(s)
	_	Send the Smart Shutdown SNMP Trap	Submit
	_	before Shutdown: 120 second(s)	
		Submit	Manageable
			Allow the SentryHD to be managed by an
	_		authenticated manager.
			Submit
			Note: The authenticated manager can be a centralized management software. Enable this option to integrate the

4. Press the Submit button to update your changes.

# 8. Linux KVM Setup for SentryHD

To install SentryHD in the Linux server, see 2.2 For Linux in Chapter 2 Installation/Uninstallation. To configure the basic networking parameters including the firewall, see Chapter 3 Console Configuration.

## 8.1 Install libvirt Tools for KVM

To shutdown the guest OS from Linux server, you have to install the libvirt. SentryHD calls the virsh to shutdown the guest OSes.

## 8.2 Configure SentryHD for KVM

Enter the estimated time for all of the guest OSes that operate on the KVM server to properly shutdown.

- 1. Login to the web interface of SentryHD. The account level should be equal to or greater than the device manager.
- 2. Go to the **Device** >> **Management** >> **Configure** page and fill the estimated time in the Run Before Shutdown field of the Reaction group.
- 3. Enter /user/local/sentryHD/command/command.KVM script file to shutdown the guest OSes. Then check the Execute Command File checkbox to enable the shutdown of the guest OSes.

			🔂 Home 🗖 Logout
Monitor UPS	Device Managemer	e System I It Notification	System Time : Thu 02/07/2013 PM 02:02:56
Communication	0	Device » Management » Configure	
Configure	0	Shutdown	Reaction
Control Weekly Schedule	0	OS Shutdown Type: Shutdown ▼ UPS Shutdown Delay: 120 second(s)	Votify Message Period: 0 second(s)
Specific Schedule	0	Enable     Event     OS Shutdown Delay (in seconds)       1     Image: Power Fail     300     second(s)       2     Image: Power Fail     300     second(s)       3     Image: Power Fail     300     second(s)       5     Schedule Shutdown     300     second(s)       Image: Power Fail     Send the Smart Shutdown SNMP Trap     before Shutdown:       120     second(s)     Submit	Execute Command File   /usr/local/sentryhd   /command/command.KVM   File:
			Note: The authenticated manager can be a centralized management software. Enable this option to integrate the SentryHD in the power management environment.

4. Press the Submit button to update your changes.

# 9. Working with the MM ShutdownAgent

1. Open SentryHD's Property menu from the Windows task bar to get the IP address of the Host Server.

SentryHD - Property	? X
General	
System	
SentryHD	
02.01.02	
-Host Information-	
IP Address=	fe80::91bb:19d5:dfe8:48ec%11 192.168.168.157
Host Name=	RobertC7
	Web
	TTP Port= 80
	V HTTPS Port= 443
	Login Account
	OK Cancel

2. Login to the MM ShutdownAgent input the Host Server IP address into the Source Trap IP and the trap port to receive the SNMP trap from SentryHD.

Monitor	Device	System	System Time : Thu 02/07/2013 PM 03:
Host	SNMP		
Configure	0	Device » Host » Configure	
Control	0	Shutdown	Source IP
orward Trap	0	Shutdown Type: Shutdown 💌	Receive Trap Port 162
		Enable Event OS Shutdown Delay (in seconds)	C For Redundant (Logical OR)
		1     Image: Power Fail     300     second(s)       2     Image: Power Fail     30     second(s)       3     Image: Power Fail     30     second(s)       3     Image: Power Fail     30     second(s)	Source Trap IP: 192.168.168.157 Community: public SNMPv3 User.
		Submit	Add Update Delete Note: Leave the community empty will accept any community sting, Leaves the SMMP-9 User empty will accept all of the users in the SMMP-9 USM table.
		☑ Notify Message Period: 60 second(s)	IP Address         Community         SNMPv3 User           1         192.168.168.157         public
		Execute Command File	▶ Manageable
		File:	<ul> <li>Allow the ShutdownAgent to be managed by an authenticated manager.</li> <li>Submit</li> <li>Note: The authenticated manager can be a SNMP card or a centralized management orbware. Enable this option to integrate the ShutdownAgent in the power management environment.</li> </ul>

SentryHD Software

3. Open the MM ShutdownAgent property menu from Windows task bar to get the IP address of the Host Server.

Shutdown-Agent - Property
General
System MM ShutdownAgent 02.00.01a
- Host Information IP Address= 192.168.168.175 fe80::20c:f1ff;fec6:cb31%4 fe80::5efe:192.168.168.175%2
Host Name= RobertXP
Web IT HTTP Port= 80 IT HTTPS Port= 443 Login Account
OK Cancel

4. Go to SentryHD's SNMP Trap page and input the IP address of the MM ShutdownAgent's Host Server into the SNMP Trap table as the Target IP. Select the MM ShutdownAgent for the Event Level and UPSv4 as the Trap MIB.

POWER TEC	H N O L O G I E S by Fore Systems, Inc.	Sentry#D	🔂 Home 🛛 Logout
Monitor	Device	System	System Time : Tue 02/05/2013 PM 02:24:20
UPS	Management	Notification	
SNMPv1 Access	O De	vice » Notification » SNMP Trap	
SNMPv3 USM	0	SNMP Trap Target List	
SNMP Trap	0	Target IP: 192.168.168.175 Co	ommunity String: public
Mail Server	0	Trap Type: SNMPv1 💌	MIB: UPSv4 💌
SMS	0	Send Trap: Once  SNMPv3 User Name:	Trap Port: 162 Event Level: MM ShutdownAgent 🔻
Wake On LAN	0	The SNMPv3 User Name must be the same as the User Name in the <u>SNMPv3 USM</u> table. SNMP P rt for:	ShutdownAgent: 161
		Add Update Delete	
		Target IP Community Port MIB Type	Event Level SNMPv3 User
		1 192.168.168.175 public 162 UPSv4 v1	MM ShutdownAgent

5. If you enable the manageable option in the ShutdownAgent then you can view all of the shutdown status, countdown timer and shutdown reason from SentryHD. The web page is on the Monitor >> Information >> ShutdownAgent

Minuteman Technical Support: Voice 1.972.446.7363 / Fax 1.972.446.9011 / Web www.minutemanups.com

PN: 34000469 R3





# Minuteur UPS Surveillance de l'alimentation et logiciel de contrôle

# **Manuel d'utilisation**

Pour obtenir les renseignements les plus à jour, veuillez consulter la traduction originale en anglais. Si vous avez des questions surl'exactitudedesspécifications traduites, des informations de garantie, des caractéristiques du produit, etc., veuillez contacter notre équipe de service à la clientèle.

# Contenu

1.Présentation générale	3
1.1 Caractéristiques	3
1.2 Prise en charge du système d'exploitation	4
2.Installation/Désinstallation	5
2.1 Pour le système d'exploitation Windows	
2.1.1 Processus d'installation	5
2.1.2 Processus de désinstallation	8
2.2 Pour le système Linux	9
2.2.1 Processus d'installation	9
2.2.2 Processus de désinstallation	10
3.Configuration de la console	11
3.1 Menu de la console	11
4.Fonctionnement sous Windows	12
4.1 Moniteur Web	12
4.2 Propriété	13
4.2.1 HTTP :	13
4.2.2 HTTPS :	13
4.2.3 Connexion au compte :	14
4.3 Afficher le compte à rebours	15
4.4 Annuler le compte à rebours	15
4.5 Message de notification de pause	15
4.6 Arrêt du service	15
5.Interface Web	16
5.1 Exécuter un navigateur Web	16
5.2 Moniteur >> Informations >> Résumé	17
5.3 Moniteur >> Information >> Batterie	18
5.4 Moniteur >> Informations >> Entrée/Sortie/Bypass	18
5.5 Moniteur >> Informations >> Identification	19
5.6 Moniteur >> Informations >> Indication d'état	19
5.7 Surveiller >> Informations >> Agent d'arrêt	20
5.8 Moniteur >> Historique >> Journal des événements	20
5.9 Moniteur >> Historique >> Journal des données	21
5.9.1 Observation de jour	22
5.9.2 Observation par mois	22
5.9.3 Observation par année	22
5.9.4 Observation selon les paramètres définis par l'utilisateur	22
5.10 Surveiller >> Historique >> Configurer	23
5.11 Surveiller >> À propos des informations	23

5.12 Appareil >> UPS >> Configurer	24
5.13 Appareil >> UPS >> Contrôle	25
5.14 Appareil >> UPS >> Niveau d'événement	26
5.15 Appareil >> Gestion >> Communication	26
5.16 Appareil >> Gestion >> Configurer	27
5.17 Appareil >> Gestion >> Contrôle	28
5.18 Appareil >> Gestion >> Programme hebdomadaire	29
5.19 Appareil >> Gestion >> Programme spécifique	29
5.20 Appareil >> Notification >> Accès SNMPv1	30
5.21 Appareil >> Notification >> USM SNMPv3	30
5.22 Appareil >> Notification >> Interruption SNMP	31
5.23 Appareil >> Notification >> Serveur de messagerie	32
5.24 Appareil >> Notification >> SMS	33
5.25 Appareil >> Notification >> Wake On LAN	33
5.26 Système >> Administration >> Informations	34
5.27 Système >> Administration >> Connexion utilisateur	34
5.28 Système >> Administration >> Web	35
5.29 Système >> Administration >> Configuration par lots	36
6.2008 Configuration du serveur principal pour SentryHD	37
7.Configuration de XenServer pour SentryHD	39
7.1 Installer le pilote PV pour le système d'exploitation invité	
7.2 Configurer SentryHD pour Xen	
8.Configuration KVM Linux pour SentryHD	40
8 1 Installer les outils libvirt pour KVM	40
8.2 Configurer SentryHD pour KVM	
9 Itilisation de MM ShutdownAgent	

# 1. Présentation

SentryHD est un logiciel de surveillance et de contrôle de l'alimentation qui communique avec un onduleur pour récupérer les informations de l'onduleur et protéger le système d'exploitation. À l'aide d'un navigateur Web, vous pouvez facilement obtenir l'état actuel de l'onduleur, configurer votre politique d'arrêt et afficher le compte à rebours jusqu'aux informations d'arrêt. SentryHD a aussi la capacité d'aviser les gestionnaires de périphériques par courriel et SMS.

SentryHD fonctionne avec plusieurs MM ShutdownAgents pour protéger un grand nombre d'hôtes alimentés par l'onduleur.



#### 1.1 Caractéristiques

- Fonctionne avec MM ShutdownAgent pour protéger un grand nombre d'hôtes : Chaque SentryHD peut connecter jusqu'à 255 MM ShutdownAgent. Chaque MM ShutdownAgent peut transmettre l'interruption SNMP reçue à 255 MM ShutdownAgent.
- 2. Supporte RS232 pour surveiller et contrôler l'onduleur connecté.
- 3. Prend en charge l'USB pour surveiller et contrôler l'onduleur connecté.
- 4. Prend en charge les interruptions SNMPv1, v2c et v3.
- 5. Prend en charge les textos pour les notifications mobiles.
- 6. Prend en charge l'accès au serveur SNMPv1, v3 pour surveiller l'état de SentryHD et configurer les paramètres d'arrêt.
- 7. Prend en charge l'interface Web par HTTP et HTTPS.
- 8. Possède la possibilité d'envoyer des courriels et des textos pour avertir l'utilisateur et le gestionnaire de l'appareil.
- 9. Prend en charge la planification de l'arrêt, du redémarrage et du test de la batterie.
- 10. Prend en charge la configuration par lots.
- 11. Prend en charge la configuration de la console pour la configuration des paramètres système de base.
- 12. Prend en charge les programmes logiciels 32/64 bits.

1.2 Support du système d'exploitation

Windows : XP-sp2, Vista, 7, 8 Windows 2003, 2008 Windows 2008 Server Core, Hyper-V 2008 R2 Linux OpenSUSE 11.4 Linux Ubuntu 10.04 Linux Fedora 3.1.9 CentOS 5.8 Citrix XenServer 6.0.0 Linux KVM

REMARQUE : lorsque vous utilisez le port USB de l'onduleur avec les systèmes d'exploitation Windows, il peut être nécessaire de configurer les « Options d'alimentation » du panneau de configuration.

# 2. Installation/Désinstallation

#### 2.1 Pour le système d'exploitation Windows

Il existe deux installateurs : SentryHD-MM-Setup (win32).exe et SentryHD-MM-Setup(x64).exe. L'un est pour le système d'exploitation Windows 32 bits et l'autre pour le système d'exploitation Windows 64 bits.

### 2.1.1 Processus d'installation

- 1. Exécutez SentryHD-MM-Setup (xxx).exe pour exécuter le programme d'installation.
- 2. Appuyez sur le bouton « Suivant » pour poursuivre l'installation ou appuyez sur le bouton « Annuler » pour arrêter l'installation.

SentryHD - InstallShield Wizard	<b>X</b>
	Welcome to the InstallShield Wizard for SentryHD
	The InstallShield Wizard will install SentryHD on your computer. To continue, click Next.
	< Back Next> Cancel

3. Lisez le contrat de licence, puis appuyez sur le bouton « Oui » pour accepter le contrat de licence et continuer l'installation ou appuyez sur le bouton « Non » pour annuler l'installation.

Please read the following license agreement carefully. Press the PAGE DOWN key to see the rest of the agreement. SentryHD LICENSE AGREEMENT Minuteman grants the customer a license to use the software st I. GRANT OF LICENSE. This License Agreement permits you to use one copy of the N includent intis performed an a single terminal connected to a	subject to the following:
Press the PAGE DOWN key to see the rest of the agreement. SentryHD LICENSE AGREEMENT Minuteman grants the customer a license to use the software ra 1. GRANT OF LICENSE. This License Agreement permits you to use one copy of the M included in this performed on a single terminal competited to a	subject to the following:
SentryHD LICENSE AGREEMENT Minuteman grants the customer a license to use the software is J. GRANT OF LICENSE. This License Agreement permits you to use one copy of the N included it this performed on a single terminal competied to a s	subject to the following:
LICENSE AGREEMENT Minuteman grants the customer a license to use the software so 1. GRANT OF LICENSE. This License Agreement permits you to use one copy of the M included in this performents and single terminal comparted to a s	subject to the following:
Minuteman grants the customer a license to use the software of 1. GRANT OF LICENSE. This License Agreement permits you to use one copy of the Minutematic training and the performance on a signal terminal connected to a s	subject to the following:
This License Agreement permits you to use one copy of the N included in this package on a single terminal connected to a single terminal connected terminal connect	
2 CODVDICHT	/linuteman software program(s) single computer or a network.
The SOFTWARE is owned by Minuteman and is protected by all other applicable national laws. Customer agrees that it doe	y international treaty provisions and es not have any title or ownership of
Do you accept all the terms of the preceding License Agreements the setup will close. To install SentryHD, you must accept this	ent? If you select No, Print
allShield	

4. L'emplacement de destination peut être modifié en appuyant sur le bouton « Parcourir » ou appuyez simplement sur « Suivant » pour installer le logiciel à l'emplacement par défaut.

SentryHD - InstallShield Wizard
Choose Destination Location Select folder where setup will install files.
Setup will install SentryHD in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C\Program Files\SentryHD\ Browse
InstallShield
<back next=""> Cancel</back>

5. Appuyez sur le bouton « Installer » pour installer le programme à l'emplacement sélectionné.

SentryHD - InstallShield Wizard	X
Ready to Install the Program The wizard is ready to begin installation.	
Click Install to begin the installation.	
If you want to review or change any of your installation setti wizard.	ngs, click Back. Click Cancel to exit the
InstallShield	Back Install Cancel

6. L'installation est en cours.

SentryHD - InstallShield Wizard	×
Setup Status	A.
The InstallShield Wizard is installing SentryHD	
Removing applications	
InstaliShield	Cancel

7. Une fois l'installation terminée, appuyez sur le bouton « Terminer » pour quitter le processus d'installation.

SentryHD - InstallShield Wizard	
	InstallShield Wizard Complete The InstallShield Wizard has successfully installed SentryHD. Click Finish to exit the wizard.
	<back cancel<="" finish="" td=""></back>

8. Une fois l'installation terminée, SentryHD démarrera automatiquement le programme de service et ajoutera une icône à la barre des tâches. Une boîte de dialogue apparaîtra pour vous demander si vous souhaitez configurer les paramètres de base via une console. Appuyez sur « Non » pour terminer l'installation puis configurez les paramètres de base une fois le logiciel ouvert ou appuyez sur « Oui » pour lancer la configuration de la console en mode shell. Voir le chapitre 3 pour plus de détails.

SentryHD - InstallShield Wizard	X
Do you want to launch the UPS-Config to	configure the basic parameters?
	Yes No

Le logiciel SentryHD est composé de deux modules :

UN**Service**module (Service UPS : UPS-Service.exe), qui s'exécute en arrière-plan en tant que service et communique avec l'onduleur par le port attribué.

UN**Statut**module (UPS-Status.exe), qui vous permet de configurer, de contrôler et de surveiller le logiciel via un navigateur Web.

Une fois l'installation terminée, le programme d'installation créera une association SentryHD avec les raccourcis suivants :

- -**Configuration de la console**:Pour lancer UPS-Config.exe afin de configurer rapidement les paramètres de communication de base.
- -**Désinstaller**Pour supprimer le programme SentryHD, les données de configuration seront toujours conservées dans le répertoire installé.

-Manuel d'utilisation:Le manuel d'utilisation en format PDF.

-**Moniteur Web**:L'interface utilisateur principale de SentryHD, utilisée pour surveiller et configurer le logiciel.

#### 2.1.2 Processus de désinstallation

- 1. Sélectionnez Désinstaller dans le dossier du programme SentryHD pour démarrer le processus de désinstallation. Ou utilisez Ajout/Suppression de programmes dans le Panneau de configuration.
- 2. Appuyez sur le bouton « OK » pour confirmer la suppression de toutes les applications ou sur le bouton « Annuler » pour annuler le processus de désinstallation.

SentryHD - InstallShield Wizard	X
Do you want to completely remove the select features?	cted application and all of its
	Yes <u>N</u> o

3. Appuyez sur le bouton « Terminer » pour terminer le processus de désinstallation.

SentryHD - InstallShield Wizard	
2	Uninstall Complete
	InstallShield Wizard has finished uninstalling SentryHD.
	< Back Finish Cancel

### 2.2 Pour le système Linux

#### 2.2.1 Processus d'installation

1. Connectez-vous au système Linux et passez au compte root : su

root

2. Copiez le fichier sentryhd-mm-linux-x86.tar.gz ou sentryhd-mm-linux-x64.tar.gz dans le répertoire /tmp :

Sentryhd-mm-linux-xxx.tar.gz /tmp

3. Changez votre répertoire de travail en /tmp :

cd /tmp

4. Décompressez le fichier sentryhd-mm-linux-xxx.tar.gz :

gunzip sentryhd-mm-linux-xxx.tar.gz

- 5. Extraire le fichier sentryhd-mm-linux-xxx.tar :
  - tar xvf sentryhd-mm-linux-xxx.tar
- 6. Exécutez le script d'installation :

. /installer



7. Appuyez sur « y » pour démarrer le processus d'installation :

+SentryHD pour Linu:   Copyright (c) 2013 P   droits réservés. +	+  x   ara Systems, Inc. Tous   +	1		
Le répertoire de destina	tion est /usr/local/sentryhd.			
Copie de fichiers service d'installation.	Lien de			
Sentry HD	0 : désactivé 1 : désactivé 2 : désactivé 3 : activé	4 : désactivé 5 : activé	6 : désactivé	
Démarrage de SentryHD terminé				
Voulez-vous configurer SentryHD maintenant ? [y/n]				

- 8. SentryHD a maintenant été installé dans le répertoire suivant /usr/local/sentryhd/ et le programme de service démarre automatiquement.
- 9. Appuyez sur « y » pour lancer le programme /usr/local/sentryhd/configure pour configurer les paramètres réseau de base pour SentryHD ou appuyez sur « n » pour terminer le processus d'installation.

Consultez le chapitre 3 pour plus d'informations sur la configuration des paramètres réseau de base.

#### 2.2.2 Processus de désinstallation

1. Connectez-vous au système Linux et accédez au compte root : su root

2. Modifiez votre répertoire de travail en /usr/local/sentryhd :

cd /usr/local/sentryhd

3. Exécutez le script de désinstallation pour supprimer SentryHD :

. /désinstaller

4. Appuyez sur « y » pour démarrer le processus de désinstallation.

# 3. Configuration de la console

Le programme de configuration est conçu pour effectuer la configuration de base de SentryHD en mode shell. Le logiciel peut être lancé à la fin du processus d'installation ou vous pouvez aller dans le répertoire installé pour le lancer manuellement.

Pour Windows, il se trouve dans « C:\Program Files\SentryHD\UPS-Config.exe » Pour Linux, il est installé dans « /usr/local/sentryhd/configure »

C:\Program Files\SentryHD\U	PS-Config.exe	
		·
		=
+=======================	===+	
I SentryHD	I	
	===+	
[1].SNMP Server Port:	161 Enekle	
[2].HIIP: [2] HTTPS.	Enable	
[4] HTTP Port	SU	
[5] HTTPS Port	443	
[6].Manageable:	Enable	
[7].Save		
[8].Set Firewall		
[9].Restart SentryHD S	ervice	
[0].Exit		
Please Enter Your Choi	ce =>	~

## 3.1 Menu console

Non.	Fonction	Description	Défaut
1.	Port du serveur SNMP	du serveur SNMP Le port UDP pour répondre aux commandes SNMP get/set	
2.	HTTP	Activer ou désactiver le protocole HTTP	Autoriser
3.	HTTPS	Activer ou désactiver le protocole HTTPS	Autoriser
4.	Port HTTP	Le port TCP pour HTTP	80
5.	Port HTTPS	Le port TCP pour HTTPS	443
6.	Maniable	Autoriser le logiciel de gestion à gérer SentryHD	Autoriser
7.	Sauver	Sauvegardez les paramètres configurés dans le fichier config.ini	
8.	Définir le pare-feu Définir le pare-feu d'exploitation.		
9.	Redémarrer SentryHD Service	Redémarrez le programme de service pour appliquer les modifications	
0.	Sortie	Quitter le programme de configuration	

# 4. Fonctionnement sous Windows

Après l'installation, SentryHD place une icône dans la barre des tâches pour indiquer l'état de l'onduleur surveillé.

Icône	Description
Þ	Normal
ا∯	Service arrêté
•••	Onduleur en mode batterie
	Batterie UPS faible
Þ	Onduleur en mode dérivation
Þ	UPS déconnecté

Pour afficher le menu contextuel, déplacez le curseur sur l'icône SentryHD, puis cliquez sur le bouton de la souris :

	Web Moniter					
	Property					
$\checkmark$	Show Countdown					
	Cancel Countdown					
	Pause Notify Message					
	Stop Service					

## 4.1 Moniteur Web

SentryHD vous permet de surveiller et de configurer le logiciel via l'interface Web.

Sélectionnez Web Monitor pour lancer le navigateur Web par défaut. Si vous êtes l'administrateur, SentryHD se connectera automatiquement à son moteur Web. Si vous vous connectez via un ordinateur distant, vous devez vous connecter avec le compte et le mot de passe appropriés.

Pour des renseignements plus détaillés sur le fonctionnement du Web, consultez le chapitre 5.

## 4.2 Propriété

La sélection du menu Propriété offre un autre moyen de configurer les paramètres de base de SentryHD. À partir de la page Général, vous pouvez observer le numéro de version du logiciel, l'adresse IP, le nom de l'hôte et les ports Web par défaut.

entryHD - Property	ହ <mark>×</mark>
General	
System	
SentryHD	
02.01.02	
Host Information	
IP Address=	fe80::91bb:19d5:dfe8:48ec%11 192.168.168.157
Host Name=	RobertC7
	Web
	ITTP Port= 80
	▼ HTTPS Port= 443
	Login Account
	OK Cancel

## 4.2.1 HTTP :

Le port HTTP peut être activé/désactivé et un numéro différent peut lui être attribué. La valeur par défaut est activée et le port est 80. Si vous avez modifié le numéro de port HTTP de 80, vous devez saisir l'URL comme suit : http://192.168.1.100:8001. Où 192.168.1.100 est l'adresse IP du PC sur lequel SentryHD est installé et 8001 est le numéro de port que vous avez attribué.

**REMARQUE**: Vérifiez le paramètre du pare-feu Windows si la connexion HTTP est refusée.

## 4.2.2 HTTPS :

Le port HTTPS peut être activé/désactivé et un numéro différent peut lui être attribué. La valeur par défaut est activée et le port est 443. Si vous avez modifié le numéro de port HTTPS de 443, vous devez saisir l'URL comme suit : http://192.168.1.100:4430. Où 192.168.1.100 est l'adresse IP du PC sur lequel SentryHD est installé et 4430 est le numéro de port que vous avez attribué.

**REMARQUE**: Vérifiez le paramètre du pare-feu Windows si la connexion HTTP est refusée.

#### 4.2.3 Connexion au compte :

SentryHD implémente 3 niveaux d'authentification pour la connexion Web comme suit :

Administrateur : A le droit exclusif de modifier les paramètres du système SentryHD.

**Gestionnaire de périphériques :**N'a pas le droit de modifier les paramètres du système, mais est autorisé à modifier les paramètres liés à l'appareil.

**Utilisateur en lecture seule :**N'a pas le droit de modifier les paramètres liés au système ou à l'appareil. L'utilisateur en lecture seule est uniquement autorisé à observer l'état de SentryHD.

Voici la liste des comptes et des mots de passe par défaut. **REMARQUE:**Ils sont sensibles à la casse.

Authentification	Compte	Mot de passe		
Administrateur	administrateur	mot de passe		
Gestionnaire de périphériques	appareil	mot de passe		
Utilisateur en lecture seule	utilisateur	mot de passe		

Web Login Account	×
Administrator	
Account:	admin
Password:	•••••
Device Manager	
Device Hundger	
Account:	device
Password:	•••••
Read Only User	
Account:	user
Password:	•••••
	Save

#### 4.3 Afficher le compte à rebours

Sélectionnez le menu Afficher le compte à rebours pour afficher la fenêtre de compte à rebours lorsque SentryHD commence le compte à rebours du délai d'arrêt du système d'exploitation.



#### 4.4 Annuler le compte à rebours

Sélectionnez le menu Annuler le compte à rebours pendant le compte à rebours pour arrêter le processus d'arrêt. Pour reprendre le processus d'arrêt, décochez l'élément de menu Annuler le compte à rebours. **REMARQUE:**Lorsque l'événement d'arrêt change, le logiciel démarre un nouveau processus de compte à rebours.

#### 4.5 Message de notification de pause

La sélection de l'option Pause du message de notification arrêtera le prochain message de notification contextuel. La notification reprendra la prochaine fois que le statut changera.

#### 4.6 Arrêt du service

La sélection de l'élément de menu Arrêter le service arrêtera le module de service SentryHD. Pour redémarrer le service, décochez l'élément de menu Arrêter le service.

# 5. Interface Web

### 5.1 Exécuter un navigateur Web

Pour vous connecter à SentryHD à partir du même PC sur lequel SentryHD est installé, sélectionnez Web Monitor dans le menu de la barre des tâches. SentryHD ouvrira votre navigateur Web par défaut et si vous êtes l'administrateur, vous serez automatiquement connecté.

**REMARQUE:**SentryHD permet à un maximum de 16 utilisateurs d'être connectés en même temps.

Vous pouvez également vous connecter à SentryHD à partir d'un PC distant. Démarrez votre navigateur Web. Entrez http://host\_name ou http://ip\_address dans la barre d'adresse pour la transmission Web en texte brut ou https://host\_name ou https://ip\_address pour la transmission Web cryptée. Si vous avez modifié le numéro de port pour HTTP ou HTTPS, entrez http:// host\_name:port\_number ou http://ip\_address:port\_number dans la barre d'adresse pour la transmission Web en texte brut ou https://host\_name:port\_number ou https:// ip\_address:port\_number ou https://

**REMARQUE:**La connexion à SentryHD à partir d'un ordinateur distant nécessitera une connexion.

	SentryHD
User Name : Password :	admin
Site II	ок P: 192.168.168.157

## 5.2 Moniteur >> Renseignements >> Résumé

Aller à**Surveiller**>>**Information**>>**Résumé**pour visualiser les informations sur l'identification, l'état d'arrêt, l'état de l'onduleur et les 5 derniers journaux d'événements.

**REMARQUE:**SentryHD déconnectera automatiquement l'utilisateur s'il n'y a pas de transmission de données pendant plus de 30 minutes.

	D D D O G I by Pare System	N° ES.	Ø	Sentry#D	🔂 Home 🛛 Lu
Monitor	Devio	e System			System Time : Wed 12/19/2012 PM
Information	Hist	ory About			
Summary	0	Monitor » Information »	Summary		
Battery	0	Summary			Shutdown
In/Out/Bypass	0		Identification		Shutdown
Identification	0	Model: E750RTXL2	2U Type:	Line interactive	Shutdown Type: Shutdown
Status Indication	0		Rating VA:	750 va <u>Detail</u>	OS Countdown:
ShutdownAgent			UPS Properties		Schedule
ShutdownAgent		UPS Communicat	ion: Normal		Next Shutdown Time:
		OUPS Health	Normal		Next Restart Time:
		Output Source:	Normal		Next lest lime:
		• Output Oource.			Weekly Schedule
		Output Load:		33%	Specific Schedule
		Battery Status:	Normal		
		Battery Capacity:		100%	
		Last 5 Event Log			
		Date/Time	Event Level		Event Description
		1 12/19/2012 15:21:4	43 System	Account admin login fro	om 127.0.0.1:29874
		2 12/19/2012 15:17:3	32 System	IPv4-HTTP: OK IPv6-HT	TP: OK IPv4-HTTPS: OK IPv6-HTTPS: OK
		3 12/19/2012 15:17:3	32 System	IPv4-SNMP Server: OK	IPv6-SNMP Server: OK
		4 12/19/2012 15:17:2	27 System	Service program startu	ıp
		5 12/18/2012 16:05:3	33 System	Service program is terr	minated
	- 1				

**Identification :**Affiche les informations sur le modèle, le type et la puissance VA de l'onduleur. **Propriétés UPS :**Énumérez les principales propriétés de l'onduleur pour surveiller l'état de santé, de sortie et de la batterie de l'onduleur.

**Fermer :**Affiche le type d'arrêt (arrêt, mise hors tension, mise en veille prolongée) et le compte à rebours pour arrêter le système d'exploitation (en secondes).

**Calendrier:**Effectuez un arrêt et un redémarrage, un test de 10 secondes ou un test approfondi de la batterie. **Journal des 5 derniers événements :**Affiche les 5 derniers journaux d'événements.

## 5.3 Moniteur >> Information >> Batterie

Aller à**Surveiller**>>**Information**>>**Pile**pour afficher les renseignements sur l'état de la batterie, la mesure de la batterie et la date de remplacement de la batterie.

	N O L O G Ly Pare Syste	E S No. 1002		(	Sentry#	D			合 Home	📑 Logo
Monitor	Devi	ce	System				Sys	tem Time :	Wed 02/06/20	013 AM 08:1
Information	His	story	About							
Summary	0	Monito	or » Information » Batte	ry						
Battery	0	Ba	ittery							
In/Out/Bypass	0		S	atus						
Identification	0		Status	Normal						
Status Indication	0		Charger Test Result	: Chargir : Passed	ig I					
ShutdownAgent	0		On Battery Time	. 0	Second(s)					
Chataown/gent			Meas	urement						
			Battery Capacity		100%					
			Voltage	41.4	v					
			Temperature	23	°C					
			Remaining Time	34	Minute(s)					
			Replace	ement Dat	e					
		Las	st Battery Replacement I	Date:						
				10/3	0/2011 (MM/DD/YYYY)					
		Ne	xt Battery Replacement I	Date:						
				10/2	9/2016 (MM/DD/YYYY)					

### 5.4 Moniteur >> Information >> Entrée/Sortie/Bypass

Aller à**Surveiller**>>**Information**>>**Entrée/Sortie/Bypass**pour visualiser les informations des mesures d'Entrée, de Bypass (non applicable à tous les modèles) et de Sortie.

	OLOGIES by Fore Systems, Inc.	0	(		)		合 Home	🔄 Logout
Monitor	Device	System				System Tim	e : Wed 12/19/20	12 PM 03:23:03
Information	History	About						
Summary	0	Monitor » Information »	In/Out/Bypass					
Battery	0	Input			Output			
In/Out/Bypass	0	Freque	ncy: 60.0	Hz		Measurement		
Identification		Volta	ige: 122.7	v	Output So	urce: Normal		
Identification	-				Frequ	ency: 60.0	Hz	
Status Indication	0	Bypass			Vo	Itage: 122.7	v	
ShutdownAgont					Cu	rrent: 1.6	Α	
ShuldownAgeni					P	ower: 204	Watt	
					Loa	iding: 33	%	
					Outlet Bank			
					<b>.</b>		.2	

### 5.5 Moniteur >> Renseignements >> Identification

Aller à**Surveiller**>>**Information**>>**Identification**pour afficher les informations d'identification et de classification UPS.

	LOGIES by Pare Systems, Inc.	•		HD	🔂 Home	📑 Logout
Monitor	Device	System		Sys	tem Time : Wed 12/19/2	2012 PM 03:23:24
Information	History	About				
Summary	0	Aonitor » Information »	Identification			
Battery	0	Identification		UPS Rating		
In/Out/Bypass	0		Model: E750RTXL2U		VA: 750 va	
Identification			Type: Line interactive	F	Power: 600 Watt	
luendication	× .	UPS Fin	mware: T012_02 00	Input Ve	oltage: 125 v	
Status Indication	0	Web So	oftware: 02.01.02	Output V	oltage: 125 v	
Obuddauradaurad				Freq	uency: 60.0 нz	
SnutdownAgent	0			High Transfer V	oltage: 166 v	
				Low Transfer Vo	oltage: 78 v	

## 5.6 Moniteur >> Information >> Indication d'état

Aller à**Surveiller>>Information>>Indication de l'état**pour visualiser l'état de l'onduleur.

POWER TECHN	OLOGIES by Para Systems, Inc.			🔒 Home	🔄 Logout
Monitor	Device	System		System Time : Thu 08/28/20	014 PM 02:02:56
Information	History	About			
Summary	0 M	onitor » Information » Status	Indication		
Battery	0	Status Indication			
In/Out/Bypass	0	Economy Mode	UPS Disconnect	Output Over Voltage	
Identification		🥝 Buzzer Enabled	Buzzer Alarm	Output Under Voltage	
Identification			Input Out Of Range	Overload	
Status Indication	0		Ø Battery Low	Over Temperature	
Oburtalau un Auranat			Ø Battery Depleted	Other Warning	
SnutdownAgent			Ø Battery Need Replace	Fan Abnormal	
			Ø Battery Ground Fault	Fuse Abnormal	
			Test In Progress	Inverter Abnormal	
			Test Fail	Charger Abnormal	
			Output Off	Ø Bypass Out Of Range	
			🥥 On Bypass	Emergency Power Off	
			UPS System Off	Phase Asynchronous	
			OPS Shutdown	Rectifier Abnormal	
			Output Breaker		

## 5.7 Surveiller >> Information >>ShutdownAgent

Aller à**Surveiller**>>**Information**>>**Agent d'arrêt**pour afficher les informations sur les MM ShutdownAgents que vous avez assignés pour travailler avec SentryHD afin de protéger un groupe de serveurs.

	OLOGIES by Fore Systems, Inc.		Sentry HD			合 Home	📑 Logout
Monitor	Device	System		Sy	stem Time :	Tue 02/05/20	013 PM 02:18:42
Information	History	About					
Summary	0 M	onitor » Information	» ShutdownAgent				
Battery	•	MM ShutdownAg	ent				
In/Out/Bypass	0	IP Address	OS	Countdown (sec)	Reason	Last Touch (sec)	
Status Indication	0	@ 1 192.168.168.1 RobertXP	75 Microsoft Windows XP Professional Service Pack 3 (build 2600)		None	2	_
ShutdownAgent	0						

#### 5.8 Surveiller >> Historique >> Journal des événements

Aller à**Surveiller**>>**Histoire**>>**Journal des événements**pour visualiser les événements qui se sont produits. Les événements existants sont écrasés lorsque le nombre maximal d'entrées (10 000) est atteint. Vous pouvez aussi télécharger le fichier journal des événements en entier (event\_log.csv).

	DUDINAL NOLOGIES by Fare Systems, Inc.	9		() S	entryHD
Monitor	Device	System			System Time : Thu 12/20/2012 AM 08:48
Information	History	About			
Event Log	0	Monitor » History	» Event Log	» Page1	
Data Log	0	Event Log			
Configure	0	Page <	1 2	>>	Download All
		© From 12/2	0/2012 (MM	DD/YYYY) To 12/	20/2012 (MM/DD/YYYY) Apply
		Date	Time	Level	Event Log
		12/20/2012	08:48:05	System	Account admin login from 127.0.0.1:23989
		12/20/2012	00:27:33	Warning	Power restore
		12/20/2012	00:27:27	Warning	No longer on battery mode
		12/20/2012	00:27:26	Information	No longer discharging from battery
		12/20/2012	00:27:23	Warning	On battery mode
		12/20/2012	00:27:23	Warning	Power fail
		12/20/2012	00:27:17	Information	Battery is discharging
		12/19/2012	15:59:36	System	Account admin login from 127.0.0.1:36786
		12/19/2012	15:30:59	Warning	Power restore
		12/19/2012	15:30:53	Warning	No longer on battery mode
		12/19/2012	15:30:52	Information	Stop countdown shutdown
		12/19/2012	15:30:52	Information	No longer discharging from battery
		12/19/2012	15:30:45	Warning	Countdown to shutdown OS in 04:59 second(s)
		12/19/2012	15:30:45	Warning	On battery mode
		12/19/2012	15:30:45	Warning	Power fail
		12/19/2012	15:30:41	Information	Battery is discharging
		12/19/2012	15:30:37	warning	Power restore
		12/19/2012	15:30:33	Information	Stop Countdown Shutdown
		12/19/2012	10.30.33	Marning	No longer on battery mode
		12/19/2012	15:20:26	Warning	Countdown to shutdown OS in 04:50 second/s)
		12/19/2012	15:30:20	Warning	On hattery mode
		12/19/2012	15:30:26	Warning	Dowor fail
		12/19/2012	15:30:20	Information	Rattery is discharning
		12/19/2012	15:21:43	System	Account admin login from 127.0.0.1:29874
		12/19/2012	15:17:32	System	IPv4_HTTP: OK IPv6_HTTP: OK IPv4_HTTPS: OK IPv6_HTTPS: OK
		12/19/2012	15:17:32	System	IPv4-SNMP Server: OK IPv6-SNMP Server: OK
		12/19/2012	15:17:27	System	Service program startup
		12/18/2012	16:05:33	System	Service program is terminated
		12/18/2012	14:00:15	System	Account admin login from 127.0.0.1:15022
	- 1				

**Date:**La date à laquelle l'événement s'est produit. **Temps:**L'heure à laquelle l'événement s'est produit. **Niveau:**Le niveau d'événement de l'événement s'est produit. **Journal des événements :**La description de l'événement qui s'est produit. **Télécharger tout :** Téléchargez le fichier journal des événements en entier au format csv.

SentryHD envoie une demande à l'onduleur, recueille les journaux d'événements enregistrés dans l'onduleur et les affiche dans le journal des événements. Veuillez noter que cette option n'apparaît que lorsque l'onduleur prend en charge cette fonction et que les journaux d'événements enregistrés dans l'onduleur peuvent être différents des journaux d'événements enregistrés dans SentryHD.

#### 5.9 Surveiller >> Historique >> Journal des données

Aller à**Surveiller>>Histoire>>Journal de données**pour afficher les valeurs d'historique pour un seul jour, un mois, une année et une période définie par l'utilisateur. Vous pouvez aussi télécharger les données historiques en cliquant sur le bouton « Télécharger ».



#### 5.9.1 Observation de jour

Cliquez sur le**Jour**onglet pour afficher les valeurs d'historique pour une journée spécifique.

**Zone de texte de date :**Cliquez sur la zone de texte Date pour afficher un calendrier permettant de choisir une date afin d'afficher les valeurs d'historique de l'onduleur connecté.

**Graphique linéaire :**Chaque couleur de ligne indique la valeur d'un élément différent. Déplacez votre curseur sur la ligne pour afficher l'heure et la valeur associée.

**Boîtes de couleur :**Cliquez sur les cases de couleur pour désactiver la ligne, cliquez de nouveau pour activer la ligne.

Télécharger: Exporte le journal de données vers un fichier csv.

#### 5.9.2 Observer par mois

Cliquez sur le**Mois**onglet pour afficher les valeurs d'historique pour un mois spécifique. **Zone de texte de date :**Cliquez sur la zone de texte Mois pour afficher un calendrier permettant de choisir un mois afin d'afficher les valeurs d'historique de l'onduleur connecté.

**Graphique linéaire :**Chaque couleur de ligne indique la valeur d'un élément différent. Déplacez votre curseur sur la ligne pour afficher l'heure et la valeur associée.

**Boîtes de couleur :**Cliquez sur les cases de couleur pour désactiver la ligne, cliquez de nouveau pour activer la ligne.

Télécharger: Exporte le journal de données vers un fichier csv.

#### 5.9.3 Observation par année

Cliquez sur le**Année**onglet pour afficher les valeurs d'historique pour une année spécifique.

**Zone de texte de l'année :**Cliquez sur la zone de texte Année pour afficher un calendrier permettant de choisir une année afin d'afficher les valeurs d'historique de l'onduleur connecté.

**Graphique linéaire :**Chaque couleur de ligne indique la valeur d'un élément différent. Déplacez votre curseur sur la ligne pour afficher l'heure et la valeur associée.

**Boîtes de couleur :**Cliquez sur les cases de couleur pour désactiver la ligne, cliquez de nouveau pour activer la ligne.

Télécharger: Exporte le journal de données vers un fichier csv.

#### 5.9.4 Observation selon les paramètres définis par l'utilisateur

Cliquez sur l'onglet Spécifique pour afficher les valeurs d'historique pour une période spécifique. **Zone de texte de date :**Cliquez sur la zone de texte Date pour afficher un calendrier permettant de choisir une plage de jours, puis appuyez sur le bouton Appliquer pour afficher les éléments de l'onduleur connecté. **Graphique linéaire :**Chaque couleur de ligne indique la valeur d'un élément différent. Déplacez votre curseur sur la ligne pour afficher l'heure et la valeur associée.

**Boîtes de couleur :**Cliquez sur les cases de couleur pour désactiver la ligne, cliquez de nouveau pour activer la ligne.

Télécharger: Exporte le journal de données vers un fichier csv.

### 5.10 Surveiller >> Historique >> Configurer

Aller à**Surveiller>>Histoire>>Configure**pour effacer les journaux de données d'historique et les journaux d'événements. Vous pouvez également attribuer l'intervalle de sauvegarde des données.

	NOLOGIES by Fore Systems, Inc.			🔂 Home	Logout
Monitor	Device	System		System Time : Wed 12/19/20	012 PM 03:28:05
Information	History	About			
Event Log	O Mor	nitor » History » Co	nfigure		
Data Log	0	History Data		Event Log	
Configure		Clear History Da Data Storage: 12 Apply Auto Export terval: Disable ~ ath Name: (File Nal 2:\Program Fil) Apply	minute(s) me:UPS.csy) Les\SentryHD\Report\ ff	Clear Event Log Maximum event log entry: 10000	

Effacer le journal des événements : Efface tous les journaux de données.

Stockage des données :Attribuez le nombre de mois pendant lesquels vous souhaitez enregistrer le journal de données. Exportation automatique :Enregistre le journal de données dans le répertoire spécifié à l'intervalle attribué.
Le logiciel crée le fichier « UPS.csv » pour exporter les données.
Intervalle :L'intervalle pour ajouter les données UPS au fichier. Nom du chemin :Le répertoire vers lequel le fichier de données sera exporté.

### 5.11 Moniteur >> À propos des renseignements

Aller à**Surveiller>>À propos de>>Information**pour afficher les informations sur l'ordinateur hôte et SentryHD.

POWER TECHN	OLOGI by Pare Systems	Es.	Sentry#D	🔂 Home	🔄 Logout
Monitor	Devic	e   Systen		System Time : Wed 12/19/20	012 PM 03:28:32
Information	Hist	ory About			
Information	0	Monitor » About »	Information		
		Host			
	- 1	Host Name:	RobertC7 Communication Port:	COM1	
	- 1	OS Version:	Microsoft Windows 7 Professional Service Pack 1 (build 7601),	32-bit	
Information SentryHD Version : 02. SentryHD utili http://www.ope The OpenSSL See the licens		Information SentryHD Version : 02.0 SentryHD utiliz http://www.ope The OpenSSL See the licens	1.02 the "OpenSSL toolkit" functionality provided by "The Open SSL Pr ssl org/. SDI acknowledges all patent rights therein." polkit is licensed under a dual-license (the OpenSSL license and text.	oject" at the original SSLeay license).	

## 5.12 Appareil >> UPS >> Configurer

Aller à**Appareil**>>**UPS**>>**Configure**pour configurer l'onduleur. Les valeurs de configuration sont enregistrées dans l'onduleur ou dans SentryHD et ces valeurs modifient le fonctionnement de l'onduleur. Les éléments de configuration incluent les éléments suivants.

	H N O L O G I E S by Fore Systems, Inc.	,		🔂 Home 🗧	] Logout
Monitor	Device	System		System Time : Thu 08/28/2014	PM 02:00:48
UPS	Management	Notification			
Configure	0	evice » UPS » Configure			
Control	0	Configure			
Event Level	0	Select UPS Configuration: Auto-Restart UPS Buzzer Low Battery Battery Replacement Date External Battery Pack Economy Mode Refresh	×	Economy Mode: 🗹 Enable	

**REMARQUE:**Différents onduleurs prennent en charge différentes options de configuration.

**Redémarrage automatique :**Après avoir cliqué sur Soumettre pour confirmer la configuration de votre redémarrage automatique, le SentryHD enverra la commande à l'onduleur pour activer le redémarrage automatique. La valeur par défaut est activer. **Avertisseur sonore UPS :**Après avoir cliqué sur Soumettre pour confirmer la configuration de votre buzzer, le SentryHD enverra la commande à l'onduleur pour activer le buzzer. La valeur par défaut est activer.

**Batterie faible :**Cette configuration enregistre les valeurs de configuration dans le SentryHD et les compare aux valeurs reçues de l'onduleur. Si le niveau de batterie reçu est inférieur à celui attribué, le SentryHD déclenchera une alarme de batterie faible. La valeur par défaut est désactivée.

**Date de remplacement de la batterie :**Après avoir défini les dates de remplacement de la batterie, le SentryHD enverra la commande à l'onduleur et enregistrera les informations dans l'onduleur. L'utilisateur peut définir combien de jours à l'avance il souhaite être informé de la prochaine date de remplacement de la batterie. Les valeurs par défaut sont activées et 60 jours.

**Ensemble de batterie externe :**Après avoir cliqué sur Soumettre pour confirmer le nombre de batteries externes connectées à l'onduleur, SentryHD enverra la commande à l'onduleur et enregistrera les informations dans l'onduleur. La valeur par défaut est 0 (sauf pour la série UPS ED5-20KVA, dont la valeur par défaut est 1).

**REMARQUE:**Le nombre correct de blocs-piles externes doit être sélectionné pour que l'onduleur et SentryHD signalent l'autonomie estimée appropriée.

**Banques de sortie :**Cette option est destinée à la fonction « Délestage de charge ». L'utilisateur peut désactiver la banque 1 ou la banque 2, selon celle à laquelle l'équipement non critique pour la mission est connecté. La désactivation de cette banque de prises peut prolonger la durée de vie de la batterie de secours pour les équipements critiques de la mission.

**Mode économie :**Configurez l'onduleur pour qu'il fonctionne en mode économie. Consultez le manuel d'utilisation de l'onduleur pour connaître le fonctionnement du mode économique.

### 5.13 Appareil >> UPS >> Contrôle

Aller à**Appareil**>>**Direction**>>**Contrôler**pour configurer les commandes de contrôle. Après avoir cliqué sur Soumettre, SentryHD enverra les commandes à l'onduleur pour activer les fonctions. Les éléments de contrôle comprennent les éléments suivants :

POWER TEC	HNOLOGIES by Fare Systems, Inc.			<table-cell-rows> Home</table-cell-rows>	🔄 Logout
Monitor	Device	System	System	Time : Wed 12/19/20	)12 PM 03:32:17
UPS	Management	Notification			
Configure	0	evice » UPS » Control			
Control	0	Control			
Event Level	0	Select UPS Control: Battery Test Outlet Control Buzzer Mute	Battery Test Batte	▼	

**Test de batterie :**Après avoir sélectionné le type de test de batterie et cliqué sur Soumettre, SentryHD enverra la commande à l'onduleur pour effectuer le test de batterie sélectionné.

**Contrôle de sortie :**Appuyez sur le bouton Banque Switch pour contrôler les banques de prises de l'onduleur afin de les éteindre ou de les allumer.

**Buzzer muet :**Le buzzer/alarme de l'onduleur peut être désactivé lorsque l'onduleur fonctionne en mode batterie. Une fois que l'onduleur atteint un avertissement de batterie faible, le buzzer/ l'alarme sera réactivé et ne pourra pas être désactivé pendant cette période. Si l'onduleur retourne au mode AC normal, le buzzer/l'alarme sera réinitialisé. Dès qu'une autre panne de courant survient, la sonnerie/l'alarme retentit. La sonnerie/l'alarme ne peut pas être désactivée en cas de défaut.

#### 5.14 Appareil >> UPS >> Niveau d'événement

Aller à **Appareil**>>**UPS**>>**Niveau de l'événement**pour configurer différents niveaux d'événements. Si vous souhaitez recevoir une notification d'événement, référez-vous à **Notification - Interruption SNMP**et**Notification - Serveur de messagerie.** 

POWER TECHINOLOGIES DOWER TECHINOLOGIES		Sentry#D	🔂 Home	<b>D</b> Logout
Monitor	Device	System	System Time : Wed 12/19/201	12 PM 03:32:36
UPS	Management	Notification		
Configure	0	)evice » UPS » Event Level		
Control	0	Event Level		-
Event Level	0	Event Over temperature Level: Alarm		
		Event Description	Level	
		1       Over temperature         2       Recover from over temperature         3       Power restore         4       Power restore         5       Output abnormal         6       Recover from output abnormal         7       Overload         8       Recover from overload         9       Bypass abnormal         10       Recover from overload         9       Bypass abnormal         11       Turn UPS output off         12       Turn UPS output off         13       UPS shutdown         14       Recover from UPS shutdown         15       Charger abnormal         16       Charger back to normal         17       UPS system off         18       UPS system on         19       Fan fail         20       Recover from fan fail         21       Fuse fail         22       Recover from fuse fail         23       UPS recover from general fail         24       UPS recover from general fail         25       Waiting furthe inout hower return	Alarm Alarm Warning Warning Alarm	
		Input power returned     Input power returned     UPS count down to shutdown     UPS no longer count down to shutdown     UPS is shutting down	Alarm Alarm Alarm Warning	
		30       UPS is not in the shutdown process         31       UPS buzzer is alarming         32       UPS buzzer is no longer alarming         33       UPS is in the economic mode         34       No longer in the economic mode         35       Inverter abnormal         36       Inverter back to normal         37       Emergency power off         38       Recover from emergency power off	Warning None Information Information Warning Warning Warning Warning	
		40 UPS buzzer is enabled	Information	

## 5.15 Appareil >> Gestion >> Communication

Aller à **Appareil**>>**Direction**>>**Communication**pour choisir le port de communication approprié pour communiquer avec l'onduleur. La valeur par défaut est Auto. SentryHD détectera automatiquement l'onduleur connecté et conservera ces informations dans le fichier de configuration.

POWER TECHNOLOGIES			🔂 Home 🛛 Logout	
Monitor	Devi	ice System		System Time : Wed 02/06/2013 PM 12:45:47
UPS	Managem	ent Notification		
Communication	0	Device » Managemen	t » Communication	
Configure	0	Communication		
Control	0	COM Port:	Auto 🔻	
Weekly Schedule	0		Submit	
Specific Schedule	0			

# 5.16 Appareil >> Gestion >> Configurer

Aller à **Appareil**>>**Direction**>>**Configure**pour configurer les fonctions principales, elles sont : Arrêt, Réaction, Exécuter une commande externe et Gérable.

			🔂 Home 🔄 Logout
Monitor	Devid	e System System Time	: Wed 12/19/2012 PM 03:33:27
UPS	Manageme	nt Notification	
Communication	0	Device » Management » Configure	
Configure	0	Shutdown	
Control	0	OS Shutdown Type: Shutdown 👻	
Weekly Schedule	0	UPS Shutdown Delay: 120 second(s) Period: 0 second(s)	
Specific Schedule	0	Enable Event OS Shutdown Delay (in seconds)	
		1       ✓       Power Fail       300       second(s)         2       ✓       Battery Low       30       second(s)         3       ✓       Schedule Shutdown       300       second(s)         Send the Smart Shutdown       I20       second(s)         ✓       Send the Smart Shutdown SNMP Trap       Submit         Submit       Submit       Submit	i second(s) ed by an a contralized to integrate the comment.

**Fermer :**Sélectionnez le type d'arrêt pour déterminer la meilleure façon d'arrêter le système d'exploitation. Les options sont Arrêter, Éteindre et Mettre en veille prolongée. La valeur par défaut est Arrêt. Sélectionnez l'événement qui déclenchera l'action d'arrêt et entrez le temps nécessaire au système d'exploitation pour arrêter. Si l'événement se rétablit pendant le compte à rebours, le processus d'arrêt sera annulé, l'hôte ne sera pas arrêté.

**Réaction:**Activez le message de notification pour afficher une boîte de message lorsqu'un événement se produit. Affectez la valeur de période pour signaler le message périodiquement, en définissant une valeur de 0, le message n'apparaîtra qu'une seule fois.

Activez le fichier de commande Exécuter pour exécuter un fichier externe attribué avant l'arrêt. Définissez une valeur de temps pour Exécuter avant l'arrêt pour informer SentryHD du moment où lancer le fichier exécutable attribué.

**Maniable :**Sélectionnez l'option Autoriser la gestion du SentryHD par un gestionnaire authentifié pour permettre à SentryHD de répondre aux requêtes de n'importe quel gestionnaire authentifié. Le gestionnaire authentifié peut être un logiciel de gestion centralisé. Le gestionnaire authentifié peut fournir une liste complète de tous les SentryHD et ShutdownAgents. Le gestionnaire authentifié communique avec SentryHD via SNMPv3 avec le premier compte par défaut de la liste USM SNMPv3. Si l'option Autoriser la gestion du SentryHD par un gestionnaire authentifié est activée, l'autorisation du compte gestionnaire passe à « Lecture/écriture », sinon l'autorisation est Désactiver. Le paramètre par défaut de l'option Autoriser la gestion du SentryHD par un gestionnaire authentifié est activé.

## 5.17 Appareil >> Gestion >> Contrôle

Aller à **Appareil**>>**Direction**>>**Contrôler**pour configurer les fonctions principales, elles sont : Contrôle local, Contrôle à distance et Piège de simulation directe.

POWER TECH	IN O L O GI E S by Parte Systems, Inc.			🔒 Home 🛛 Logout
Monitor	Device	System		System Time : Wed 12/19/2012 PM 03:33:50
UPS	Management	Notification		
Communication	O D	evice » Management » Cont	trol	
Configure	0	Local Control		Forward Simulation Trap
Control	0	Cancel Countdown		Power Fail Power Restore
Weekly Schedule	0	Pause Notify Message	•	Note: The forward simulation trap will send the related trap of
Specific Schedule	0	Note: The Pause Notify Message the next time the status changes	e will stop the pop up messages until s.	UPSv4 MIB to the assigned <u>SWMP ITAD LIST</u> .
		Remote Control		
	_	Cancel Shutdown		
		Note: Send the Cancel Shutdov hosts.	wn SNMP trap to the assigned target	

**Contrôle local** :Appuyez sur le bouton « Annuler le compte à rebours » pendant le processus d'arrêt du compte à rebours pour arrêter le compte à rebours. Appuyez de nouveau sur le bouton pour reprendre le processus d'arrêt. En plus de sélectionner l'élément de menu Reprendre le compte à rebours pour continuer le processus de compte à rebours, il démarrera également un nouveau processus de compte à rebours.

Appuyez sur « Pause du message de notification » pour mettre en pause le message de notification. Le message reprendra lorsque l'état de l'onduleur changera.

**Télécommande :**Appuyez sur le bouton « Annuler l'arrêt » pour envoyer le message d'annulation de l'arrêt à tous les hôtes SNMP cibles afin d'arrêter le processus d'arrêt.

**Piège de simulation directe :**Appuyez sur le bouton « Panne de courant » pour envoyer le piège SNMP de panne de courant simulée aux adresses IP ciblées attribuées.

Appuyez sur le bouton « Restaurer l'alimentation » pour envoyer le piège SNMP de restauration d'alimentation simulé aux adresses IP ciblées attribuées.
#### 5.18 Appareil >> Gestion >> Programme hebdomadaire

Aller à **Appareil**>>**Direction**>>**Horaire hebdomadaire** pour établir un horaire hebdomadaire pour l'UPS.

Vous pouvez sélectionner Aucune action, Arrêter, Redémarrer, Test de 10 secondes et configurer le jour et l'heure auxquels vous souhaitez que l'action soit exécutée.

**REMARQUE**La priorité d'un horaire spécifique est supérieure à celle de l'horaire hebdomadaire.

POWER TECHNOLOGIES				<b>₿</b> S	entry	HD					<table-cell-rows> Home</table-cell-rows>	🔄 Logoul
Monitor	Device	2	System						Sy	stem Tim	ie : Wed 12/19/20	012 PM 03:34
UPS N	lanagemen	it	Notification									
Communication	0	Device »	Management » Weekly	Schedule								
Configure	0	Wee	kly Schedule									
Control	0		Action	SUN	MON	TUE	WED	THR	FRI	SAT	Time	
Weekly Schedule	0	1	10-Seconds Test	-			<b>v</b>				06:00	
Specific Schedule		2	Shutdown	-					1		17:00	
opecine ochedule	<u> </u>	3	Restart	-	1						05:00	
	- 1	4	No Action	-							00:00	
	- 1	5	No Action	•							00:00	
	- 1	6	No Action								00:00	
	- 1	7	No Action	-							00:00	
	- 1	8	No Action	-							00:00	
	- 1				S	ubmit						

## 5.19 Appareil >> Gestion >> Programme spécifique

Aller à **Appareil**>>**Direction**>>**Horaire précis** pour établir un horaire précis pour l'UPS. Vous pouvez définir une date (MM/JJ/AAAA et une heure (hh:mm spécifiques pour qu'une action spécifique (arrêt, arrêt, redémarrage, test de 10 secondes, test de batterie profonde soit effectuée.

**REMARQUE**La priorité d'un horaire spécifique est supérieure à celle de l'horaire hebdomadaire.

	OWER TECHNOLOGIES			SentryHD	🔒 Home	Logout
Monitor	Device	System			System Time : Wed 12/19/20	012 PM 03:36:52
UPS N	lanagement	Notification				
Communication	0	Device » Management	» Specific Schedul	e		
Configure	0	Specific Schedul	e			
Control	0	Date	(MM/DD/YYYY)	Time(hh:mm)	Action	
Weekly Schedule	0	1 0	0/00/2000	00:00	Stop Action 🔻	
Coosifia Cobodula		2 0	0/00/2000	00:00	Stop Action 🔻	
specific schedule	•	3 0	0/00/2000	00:00	Stop Action 🔻	
		4 0	0/00/2000	00:00	Stop Action 🔻	
		5 0	0/00/2000	00:00	Stop Action 🔻	
		6 0	0/00/2000	00:00	Stop Action 👻	
		7 0	0/00/2000	00:00	Stop Action 🔻	
		8 0	0/00/2000	00:00	Stop Action 👻	
		9 0	0/00/2000	00:00	Stop Action 💌	
		10 0	0/00/2000	00:00	Stop Action 🔻	
		11 0	0/00/2000	00:00	Stop Action 👻	
		12 0	0/00/2000	00:00	Stop Action 🔻	
	- 1	13 0	0/00/2000	00:00	Stop Action 👻	
	- 1	14 0	0/00/2000	00:00	Stop Action 👻	
		15 0	0/00/2000	00:00	Stop Action 🔻	
		16 0	0/00/2000	00:00	Stop Action 👻	
				Submit		

## 5.20 Appareil >> Notification >> Accès SNMPv1

Aller à **Appareil**>>**Notification**>>**Accès SNMPv1** pour configurer l'accès SNMPv1. SentryHD prend en charge le protocole SNMP et SNMP NMS (Network Management System, qui sont couramment utilisés pour surveiller les périphériques réseau. Pour empêcher tout accès non autorisé, vous pouvez spécifier les adresses IP NMS, leurs chaînes communautaires et leurs niveaux d'accès. Le nombre maximal d'entrées IP est de 255.

				🔂 Home 🗖 Logout	
Monitor	Device	System			System Time : Tue 02/05/2013 PM 02:21:3
UPS	Management	Notification			
SNMPv1 Access	0	Device » Notification » S	SNMPv1 Access		
SNMPv3 USM	0	SNMPv1 Access T	able		
SNMP Trap	0	SNMP Port: 161 Submit	Download MIB: <u>SentryHD</u>		
lail Server	0				
SMS	0	Access IP: Community:	192.168.168.175 public	Access I packets	Pladdress 0.0.0.0 will allow the SNMP to be received from any host.
Nake On LAN	0	Permission:	Read Only  Add Update Delete		
			IP Address	Community	Permission
		1	192 168 168 175	public	Read Only

## 5.21 Appareil >> Notification >> USM SNMPv3

Aller à **Appareil**>>**Notification**>>**SNMPv3 USM** pour configurer l'accès SNMPv3. SNMPv3 offre des fonctionnalités telles que le cryptage des paquets et l'authentification pour améliorer la sécurité. Le SNMPv3 USM (User Session Management vous permet d'attribuer 32 noms d'utilisateurs dont l'accès est accordé via le protocole SNMPv3. Vous pouvez également définir leurs niveaux de sécurité respectifs, leurs mots de passe d'authentification, leurs mots de passe de confidentialité et leurs autorisations. Le premier compte ne peut pas être supprimé, pour le désactiver, rendez-vous sur le**Appareil >> Gestion >> Configurer** page, puis décochez l'option gérable.

Monitor	Device	System		System Time : V	Ved 12/19/2012 PM 03:38
UPS	Management	Notification			
NMPv1 Access	0	Device » Notification » SNMPv3	USM		
SNMPv3 USM	0	SNMPv3 USM			
NMP Trap	0	Context Name: cn1027 Auth Protocol: MD5	Priv Protocol: CBC-DES		
lail Server	0	Submit			
MS	0	User Name: n	nanager	Security Level: Auth, Priv	•
Vake On LAN	0	Auth Password: * Permission: F	******* Read/Write 🔻	Priv Password: *******	
			Add		

#### 5.22 Appareil >> Notification >> Interruption SNMP

Aller à **Appareil**>>**Notification**>>**Piège SNMP** pour configurer les pièges SNMP. Pour activer les interruptions SNMP, vous devez ajouter les adresses IP cibles à la liste des adresses IP cibles. Spécifiez la chaîne de communauté, le type d'interruption, le MIB, le nom d'utilisateur SNMPv3 (si le type d'interruption est SNMPv3, le port UDP et le niveau d'événement. Pour mettre à jour ou supprimer une adresse IP cible, sélectionnez l'adresse IP dans la liste IP cible et cliquez sur Mettre à jour ou Supprimer. Vous pouvez ajouter jusqu'à 255 adresses IP cibles dans la liste.

POWER TEC	H N O L O G I E S by Pare Systems, Inc.	9	Sentry#D	Ter Home 🔄 Logou
Monitor	Device	System		System Time : Tue 02/05/2013 PM 02:24
UPS	Management	Notification		
SNMPv1 Access	0	Device » Notification » SNMP Tr	ap	
SNMPv3 USM	0	SNMP Trap Target List		
SNMP Trap	0	Target IP:	192.168.168.175 Community String	j: public
lail Server	0	Trap Type:	SNMPv1 - MIE	a: UPSv4 🔻
SMS	0	Send Trap: SNMPv3 User Name:	Once  Trap Por Event Leve	t: 162 I: MM ShutdownAgent 🔻
Wake On LAN	0	The SNMPv3 User Name mu Name in the <u>SNMPv3 USM</u> t	st be the same as the User SNMP Port for ShutdownAgen	t 161
	_		Add Update Delete	
		Target IP	Community Port MIB Type Event Le	vel SNMPv3 User
		1 192.168.168.175	public 162 UPSv4 v1 MM Shutdow	nAgent

Vous pouvez sélectionner les notifications d'événements à envoyer aux adresses IP cibles. **Niveau de l'événement :**Trois niveaux d'événements sont énumérés comme suit : **Information:**Toutes les notifications d'événements sont envoyées à l'adresse IP cible. **Avertissement:**Les notifications d'événement d'avertissement et d'alarme sont envoyées à l'adresse IP cible.

Alarme:Seules les notifications d'événements d'alarme sont envoyées à l'adresse IP cible. Aller à Appareil>>Direction>>Niveau de l'événement pour modifier le niveau de l'événement. Agent d'arrêt MM :Tous les événements d'alimentation seront envoyés à l'agent d'arrêt MM attribué. SentryHD collectera toutes les informations MM ShutdownAgent via le compte « gestionnaire » SNMPv3, puis les affichera dans le Surveiller>> Information>>Agent d'arrêt page.

**REMARQUE**:SentryHD fournit des interruptions SNMPv1, SNMPv2c et SNMPv3. Si vous utilisez l'interruption SNMPv3, la table USM SNMPv3 doit être configurée.

#### 5.23 Appareil >> Notification >> Serveur de messagerie

Aller à **Appareil**>>**Notification**>>**Serveur de messagerie** pour configurer les notifications par email. L'utilisateur peut configurer le serveur SMTP et le destinataire de courriel afin que le destinataire désigné puisse recevoir la notification par courriel de SentryHD chaque fois qu'un événement se produit.

MINUTE POWER TEC	HN OLOGIES by Tara Systems, Inc.	Sentry#D	🚹 Home 🛛 Logout
Monitor	Device	System	System Time : Tue 02/05/2013 PM 02:28:37
UPS	Management	Notification	
SNMPv1 Access	0	evice » Notification » Mail Server	
SNMPv3 USM	0	Mail Server Configuration	
SNMP Trap	0	SMTP Server Name or IP: xxzzy.minutemanups.com (51 bytes max.)	The Account and Password are not
Mail Server	0	SMTP Server Port: 25	required to send emans.
SMS	0	Account admin (32 bytes max.)	
Wake On LAN	0	Submit	
		Mail List	
		Receiver: support@minutemanups.com	
		Event Level: Information 👻 Add Update Delete	
		Receiver	Event Level
		1 support@minutemanups.com	Information

**Serveur SMTP :**Il s'agit du nom d'hôte du serveur de messagerie SMTP utilisé pour envoyer le courriel depuis SentryHD.

**Compte:**Le compte de connexion au serveur SMTP (non requis). **Mot de passe:**Le mot de passe de connexion au serveur SMTP (non requis). **Ajouter, mettre à jour et supprimer :**Ajouter, mettre à jour ou supprimer un récepteur.

# 5.24 Appareil >> Notification >> SMS

Aller à **Appareil**>>**Notification**>>**SMS** pour configurer les paramètres SMS. Pour envoyer le message SMS sur votre téléphone mobile, un modem GSM doit être connecté à votre ordinateur par un port COM RS232. SentryHD enverra le texto par la commande AT au format PDU. Tout modem GSM prenant en charge les trois commandes AT suivantes fonctionnera avec SentryHD :

```
À
AT+CMGF
AT+CMGS
```

**Modem GSM :**Attribuez un port COM et le débit en bauds au modem GSM. **Numéro de cellulaire :**Ajoutez, modifiez ou supprimez les numéros de téléphone mobile dans la liste.

	H N O L O G I E S by Fore Systems, Inc.		Logout
Monitor	Device	System System Time : Wed 12/19/2012 PM (	03:47:2
UPS	Management	Notification	
SNMPv1 Access	0	Device » Notification » SMS	
SNMPv3 USM	0	GSM Modem	
SNMP Trap	0	COM Port: Disable  Baud Rate: 2400	
Mail Server	0	Submit	
		Mobile Phone Number	
SMS	0	Phone Number.	
Wake On LAN	0	Event Level: None	
		Mobile Phone Number Event Level	
		1 None	
		1 None	

## 5.25 Appareil >> Notification >> Wake On LAN

Aller à **Appareil**>>**Notification**>>**Réveil sur le réseau local** pour configurer les paramètres de démarrage des PC clients via le réseau en utilisant leur adresse MAC. Le maximum est de 256 adresses MAC. Cette configuration peut réveiller les PC clients après le rétablissement de l'alimentation ou le démarrage de SentryHD

	H N O L O G I E S by Fore Systems, Inc.	•		D		<table-cell-rows> Home</table-cell-rows>	Logout
Monitor	Device	System			System Time	Wed 12/19/201	12 PM 03:47:5
UPS	Management	Notification					
SNMPv1 Access	0	Device » Notification » Wake	On LAN				
SNMPv3 USM	0	WOL Host List					
SNMP Trap	0		Title: None				
Mail Server	0	MAC (xx-xx-x)	-xx-xx-xx): 00-00-00-00-00-00 Delay: 0 minute(s)				
SMS	0	Wake Up C	condition: Power Restore	System Startup			
Wake On LAN	0		Add				
		Title	MAC	Delay	Restore	Startup	
		1 None	00-00-00-00-00	0	No	No	

## 5.26 Système >> Administration >> Renseignements

Aller à **Système**>>**Administration**>>**Information** pour attribuer les informations système à SentryHD, y compris la date d'installation, l'emplacement et une description.

	OLOGIE by Fore Systems, In	9 5	Sentry	HD	🔂 Home	Logout
Monitor	Device	System			System Time : Wed 12/19/20	012 PM 03:48:23
Administration						
Information	0	System » Administration » In	formation			
Login User	0	Information				
Web	0	System Name:	SentryHD			
Batch Configuration		System Contactor:	Para			
Batch Comgaration	<u> </u>	System Location:	RPC			
	- 1	Installation Date:	12/18/2012	(MM/DD/YYYY)		
	- 1	Description:	Battery Backup			
	- 1			Submit		

#### 5.27 Système >> Administration >> Connexion de l'utilisateur

Aller à **Système>>Administration>>Connexion utilisateur** pour gérer l'authentification de connexion à l'interface Web en attribuant 3 différents niveaux de comptes d'utilisateurs.

Les autorisations d'accès pour les types de compte sont énumérées comme suit :

Administrateur : Autorisé à modifier tous les paramètres.

Gestionnaire de périphériques : Autorisé à modifier les paramètres liés à

l'appareil. **Utilisateur en lecture seule :**Seul l'état de SentryHD peut être visualisé.

		S Since.			SentryHD	🔂 Home	📑 Logout
Monitor	Device	e Sy:	stem			System Time : Wed 12/19/20	12 PM 03:49:32
Administration							
Information	0	System » Ad	ministration » Lo	ogin User			
Login User	0	User Ma	nager			 	
Web	0		Privilege		Account Name (16 chars max.)	Password (16 chars max.)	
Batch Configuration	0	1	Administrat	or	admin	•••••	
		2	Device Mana	ger	device	•••••	
	- 1	3	Read Only U	ser	user	•••••	
					Submit		

## 5.28 Système >> Administration >> Web

Aller à **Système**>>**Administration**>>**Web** pour configurer les protocoles de communication HTTP/HTTPS disponibles dans SentryHD.

	OLOGIES by Pare Systems, Inc	•		🔒 Home 🔤 Logout
Monitor	Device	System		System Time : Wed 12/19/2012 PM 03:50:01
Administration	•	System » Administratio	n » Web	
Login User	0	Configure Web		SSL Certificate
Web Batch Configuration	0	HTTP: HTTPS: HTTP Port HTTPS Port	<ul> <li>Enable</li> <li>Disable</li> <li>Enable</li> <li>Disable</li> <li>B0</li> <li>443</li> </ul>	Certificate File (PEM format): Update the certificate file, which is generated by openssl for the new SSL connection.
		Web Refresh Period:	3 Seconds	Submit

HTTP :Activation ou désactivation de la connexion HTTP avec SentryHD.

**HTTPS**: Activation ou désactivation de la connexion HTTPS avec SentryHD.

**Port HTTP :**Le port HTTP peut être modifié vers un autre port au lieu du port HTTP standard (80).

**Port HTTPS :**Le port HTTPS peut être modifié pour un port différent au lieu du port HTTP standard (443).

**Période de rafraîchissement du site Web :**La période de temps nécessaire pour rafraîchir les pages Web. La plage est de 1 à 9999 secondes.

**Certificat SSL :**Afin d'assurer une connexion sécurisée entre SentryHD et le poste de travail connecté, un certificat SSL peut être utilisé pour crypter et sécuriser l'intégrité des données transmises.

**Fichier de certificat :**Cela vous permet de remplacer votre propre fichier de certificat SSL. SentryHD prend en charge le format PEM généré par OpenSSL. Cliquez sur Choisir un fichier pour télécharger un fichier de certificat.

## 5.29 Système >> Administration >> Configuration par lots

Aller à**Système>>Administration>>Configuration par lots**pour effectuer des configurations par lots. SentryHD fournit une configuration par lots pour permettre une installation rapide et sans effort sur plusieurs hôtes SentryHD. Vous pouvez dupliquer les paramètres en téléchargeant le fichier de configuration à partir du SentryHD que vous avez configuré avec succès et en téléchargeant les fichiers de configuration sur d'autres hôtes.

**Télécharger:**Téléchargez le fichier config.ini pour pouvoir stocker ou modifier le fichier de configuration. **Télécharger :**Téléchargez le fichier de configuration sur SentryHD pour appliquer les modifications.

POWER TECHNOLOGIES Frus System, Inc.		N°		Logout
Monitor	Devic	e System	System Time : Wed 12/19/201	12 PM 03:50:18
Administration				
Information	0	System » Administration » Batch Configu	Iration	
Login User	0	System Configuration		
Web	0	Configuration File:	Download	
Batch Configuration	0	Browse	Upload	
		DescriptionThe batch configuration is used to system parameters at one time. Ple following steps to complete the pro-	configure all of the ease follow the press:	
		Step 1 Press the Download button to dow configure.ini file which includes al parameters.	inload the I of the system	
		Step 2 Please follow the file format, there before the item_name=item_value must be the [End] section.	: must be a [Section] e. And the last line	
		Step 3 Edit the configure.ini file by the ter Remove the items which you don't changed, just leave the items whic configure.	xt edit software. 	
	- 1	Step 4 Select the modified configure.ini f Upload button to upload the file.	file and press the	
		Step 5 Wait for about 10 seconds for the st changes.	ystem to update the	

# 6. Configuration du serveur principal 2008 pour SentryHD

Lors de l'installation de SentryHD sur le serveur Core 2008, les commandes suivantes sont nécessaires pour transférer

le fichier et ajouter certaines règles pour le pare-feu.

1. Désactiver le pare-feu :

netsh advfirewall a désactivé l'état de tous les profils

2. Activer le pare-feu :

netsh advfirewall définit l'état de tous les profils sur

3. Ajoutez un répertoire partagé à distance : net use e: \\<adresse IP>\e

#### 4. Ouvrez le piège SNMP UDP 162

netsh advfirewall pare-feu ajouter une règle nom = "SNMPTrap" protocole = UDP dir = out localport = 162 action = autoriser

#### 5. Ouvrir le serveur SNMP UDP 161

netsh advfirewall pare-feu ajouter une règle nom="SNMPServer" protocole=UDP dir=in localport=161 action = autoriser

#### 6. Ouvrez le HTTP TCP 80

netsh advfirewall pare-feu ajouter une règle nom = "HTTP" protocole = TCP dir = dans localport = 80 action = autoriser

#### 7. Ouvrez HTTPS TCP 443

netsh advfirewall pare-feu ajouter une règle nom = "HTTPS" protocole = TCP dir = dans localport = 443 action = autoriser

Tout d'abord, placez le fichier d'installation SentryHD-Setup(x64).exe dans le répertoire du serveur 2008. S'il n'y a pas de CD-ROM, vous pouvez définir la commande « Désactiver le pare-feu », la commande « Ajouter un répertoire partagé à distance » puis copier le fichier de votre PC vers le serveur 2008. N'oubliez pas de définir la commande « Activer le pare-feu » lorsque vous avez terminé.

Deuxièmement, suivez le chapitre 2 pour installer SentryHD sur le serveur 2008.

La dernière étape consiste à utiliser les commandes open HTTP/HTTPS, SNMP Trap/Server port pour ouvrir les ports nécessaires.

Vous pouvez exécuter UPS-Config.exe pour configurer les paramètres réseau de base pour les protocoles réseau Web et SNMP après l'installation.

C:\Program Files\SentryHD\U	PS-Config.exe	1	
			<b>A</b>
			=
+	===+		
l SentryHD	I		
+:::::::::::::::::::::::::::::::::::::	161		
[1].SMMP Server Port: [2].HTTP:	Enable		
[3].HTTPS:	Enable		
[4].HTTP Port:	80		
[5].HIIPS Port: [6] Manageable:	443 Fnahle		
[7].Save	LIIGDIE		
[8].Set Firewall			
[9].Restart SentryHD S	Service		
[⊍].EXIT Please Enter Your Choi	ce =>		
inter roal onor			

Sélectionnez le numéro [8] pour configurer le pare-feu pour SentryHD.

C:\Program Files\SentryHD\UF	PS-Config.exe	_ 0	X	
+	===+			
I SentryHD				
+	===+			
<pre>[1].SNMP Server Port:</pre>	161			
[2].HTTP:	Enable			
[3].HTTPS:	Enable			
[4].HTTP Port:	80			
[5].HTTPS Port:	443			
[6].Manageable:	Enable			
[7].Save				
[8].Set Firewall				
[9].Restart SentryHD Service				
[0].Exit				
Please Enter Your Choice => 8				
We II help to insert or remove the firewall rules of SentryHD for you,				
Do you want to insert or remove the firewall? [I]nsert, [R]emove				
Please Enter Your Choice =>				
			<b>T</b>	

# 7. Configuration de XenServer pour SentryHD

Pour installer SentryHD sur Citrix XenServer, consultez la section 2.2 Pour Linux du chapitre 2 Installation/Désinstallation. Pour configurer les paramètres réseau de base, y compris le parefeu, voir Chapitre 3 Configuration de la console.

#### 7.1 Installer le pilote PV pour le système d'exploitation invité

Pour arrêter le système d'exploitation invité à partir de XenServer, le pilote PV doit être installé sur tous les systèmes d'exploitation invités pour qu'ils s'arrêtent correctement.

## 7.2 Configurer SentryHD pour Xen

Entrez le temps estimé nécessaire à l'arrêt correct de tous les systèmes d'exploitation invités qui fonctionnent sur le serveur XenServer.

- 1. Connectez-vous à l'interface Web de SentryHD. Le niveau du compte doit être égal ou supérieur à celui du gestionnaire de périphériques.
- 2. Allez à la**Appareil**>>**Direction**>>**Configure**page et remplissez le temps estimé dans le champ Exécuter avant l'arrêt du groupe Réaction.
- 3. Entrez le fichier de script /user/local/sentryhd/command/command.Xen pour arrêter les systèmes d'exploitation invités. Cochez ensuite la case Exécuter le fichier de commande pour activer l'arrêt des systèmes d'exploitation invités.

POWER TECH	IN OLOGIE	Sentry#	D 🔂 Home 🗔 Logo
Monitor	Device	System	System Time : Thu 02/07/2013 PM 02:
UPS	Management	Notification	
Communication	0	Device » Management » Configure	
Configure	0	Shutdown	Reaction
Control	0	OS Shutdown Type: Shutdown 👻	✓ Notify Message
Weekly Schedule	0	UPS Shutdown Delay: 120 second(s)	Period: 0 second(s)
Specific Schedule	0	Enable Event OS Shutdown Delay (in seconds)	Execute Command File
	- 1	1 Power Fail 300 second(s)	/usr/local/sentryhd /command/command.Xen
	- 1	2 Sattery Low 30 second(s)	
	- 1	3 Schedule Shutdown 300 second(s)	File:
		Schedule Shutdown	Run before Shutdown: 120 second(s)
		Send the Smart Shutdown SNMP Trap	Submit
		before Shutdown: 120 second(s)	
		Submit	Manageable
			Allow the SentryHD to be managed by an
			Submit
			Note: The authenticated manager can be a centralized
			management software. Enable this option to integrate the SentryHD in the power management environment.

4. Appuyez sur le bouton Soumettre pour mettre à jour vos modifications.

# 8. Configuration KVM Linux pour SentryHD

Pour installer SentryHD sur le serveur Linux, voir 2.2 Pour Linux dans le chapitre 2 Installation/Désinstallation. Pour configurer les paramètres réseau de base, y compris le pare-feu, voir Chapitre 3 Configuration de la console.

#### 8.1 Installer les outils libvirt pour KVM

Pour arrêter le système d'exploitation invité du serveur Linux, vous devez installer libvirt. SentryHD appelle le virsh pour arrêter les systèmes d'exploitation invités.

### 8.2 Configurer SentryHD pour KVM

Entrez le temps estimé nécessaire pour que tous les systèmes d'exploitation invités qui fonctionnent sur le serveur KVM s'arrêtent correctement.

- 1. Connectez-vous à l'interface Web de SentryHD. Le niveau du compte doit être égal ou supérieur à celui du gestionnaire de périphériques.
- 2. Allez à la**Appareil**>>**Direction**>>**Configure**page et remplissez le temps estimé dans le champ Exécuter avant l'arrêt du groupe Réaction.
- 3. Entrez le fichier de script /user/local/sentryHD/command/command.KVM pour arrêter les systèmes d'exploitation invités. Cochez ensuite la case Exécuter le fichier de commande pour activer l'arrêt des systèmes d'exploitation invités.
- 4. Appuyez sur le bouton Soumettre pour mettre à jour vos modifications.

	H N O L O G I E by Fare Systems, I		D 🔂 Home 🗖 Logout
Monitor	Device	System	System Time : Thu 02/07/2013 PM 02:02:56
UPS	Managemen	t Notification	
Communication	0	Device » Management » Configure	
Configure	0	Shutdown	Reaction
Control	0	OS Shutdown Type: Shutdown 🔻	Notify Message
Weekly Schedule	0	UPS Shutdown Delay: 120 second(s)	Period: 0 second(s)
Specific Schedule	0	Enable Event OS Shutdown Delay (in seconds)	Execute Command File
		1     Image: Power Fail     300     second(s)       2     Image: Battery Low     30     second(s)       3     Image: Schedule Shutdown     300     second(s)	/usr/local/sentryhd /command/command.KVM File:
		Schedule Shutdown	Run before Shutdown: 120 second(s)
		Send the Smart Shutdown SNMP Trap	Submit
	- 1	before Shutdown: 120 second(s)	Manageable
		Submit	Allow the SentryHD to be managed by an authenticated manager.  Submit Note: The authenticated manager can be a centralized management software. Enable this option to integrate the SentryHD in the power management environment.

# 9. Utilisation de MM ShutdownAgent

1. Ouvrez le menu Propriétés SentryHD dans la barre des tâches Windows pour obtenir l'adresse IP du serveur hôte.

Sentry	yHD - Property	? ×
Ger	neral	
	System SentryHD 02.01.02	
	Host Information	fe80::91bb:19d5:dfe8:48ec%11 192.168.168.157
	Host Name=	RobertC7
		Web V HTTP Port= 80 V HTTPS Port= 443 Login Account
		OK Cancel

2. Connectez-vous à MM ShutdownAgent, entrez l'adresse IP du serveur hôte dans l'adresse IP de l'interruption source et le port d'interruption pour recevoir l'interruption SNMP de SentryHD.

POWER TEC	Home CLAGOU		🔂 Home 🔤 Logout
Monitor	Device	System	System Time : Thu 02/07/2013 PM 03:05:04
Configure		Device » Host » Configure	
Control Forward Trap	0	► Shutdown Type:       Shutdown ▼         Image: Enable       Event       OS Shutdown Delay (in seconds)         Image: Im	Source IP Receive Trap Port 162 Purpose:         © For Redundant (Logical OR)         © For Parallel (Logical AND)         Submit      Source Trap IP: 192.168.168.167         Community: public         SNMPV3 User:         Add Update Delete Note: Leave the community empty will accept any community
		Reaction     Notify Message     Period: 60 second(s)      Execute Command File     File:     File:     Run Before Shutdown: 120 second(s)     Submit	Imple Leave the SIMMPVG User empty will accept all of the user in the SIMMPVG USM table.         Imple Leave the SIMMPVG USM table.         Imple Leave the SIMMPVG USM table.         Imple Leave table.         Imple Leavetable.         Imple

3. Ouvrez le menu des propriétés MM ShutdownAgent dans la barre des tâches Windows pour obtenir l'adresse IP du serveur hôte.

Shut	down-Agent - Property	<u>?</u> ×
Ge	neral	
	System MM ShutdownAgent 02.00.01a	
	Host Information IP Address= IP Address= I92.168.168.175 fe80::20c:f1ff:fec6:cb31%4 fe80::5efe:192.168.168.175%2	-
	Host Name= RobertXP	
	Web IT HTTP Port= 80 IT HTTPS Port= 443 Login Account	
-	OK Canc	el

4. Accédez à la page SNMP Trap de SentryHD et entrez l'adresse IP du serveur hôte du MM ShutdownAgent dans la table SNMP Trap comme IP cible. Sélectionnez MM ShutdownAgent pour le niveau d'événement et UPSv4 comme Trap MIB.

	H N O L O G I E S by Fore Systems, Inc.	Sentry#D	🔂 Home 🛛 Logout
Monitor	Device	System	System Time : Tue 02/05/2013 PM 02:24:20
UPS	Management	Notification	
SNMPv1 Access	0	evice » Notification » SNMP Trap	
SNMPv3 USM	0	SNMP Trap Target List	
SNMP Trap	0	Target IP: 192.168.168.175	Community String: public
Mail Server	0	Trap Type: SNMPv1 🔻	MIB: UPSv4 🔻
SMS	0	Send Trap: Once 👻 SNMPv3 User Name:	Trap Port: 162 Event Level: MM ShutdownAgent 🔻
Wake On LAN	0	The SNMPv3 User Name must be the same as the User Name in the <u>SNMPv3 USM</u> table. SNMP P	rt for ShutdownAgent: 161
		Add         Update           Target IP         Community         Port         MIB         Type           1         192.168.168.175         public         162         UPSv4         Type	Delete ype Event Level SNMPv3 User v1 MM ShutdownAgent

5. Si vous activez l'option gérable dans ShutdownAgent, vous pouvez afficher tous les états d'arrêt, le compte à rebours et la raison de l'arrêt à partir de SentryHD. La page Web se trouve sur Monitor >> Information >> ShutdownAgent

Assistance technique Minuteman : Voix 1.972.446.7363 / Fax 1.972.446.9011 / Web www.minutemanups.com

Réf. : 34000469 R3