

## Security

### Access setup for web, SSL, SSH and Telnet

Note:

Default login ID is **snmp** and password is **1234** for SSH and Telnet.

Note: SSH/Telnet command

Command	Description
set outlet on #	turn on the specific outlet; # is outlet number
set outlet off #	turn off the specific outlet; # is outlet number
set pdu reboot	Reboot PDU
get outlet status	Get outlet on/off status
get pdu current	Get PDU total current
get circuit current	Get the specific circuit current
get outlet current	Get the specific outlet current
get pdu power	Get PDU voltage, PF and Frequency
get pdu kWh	Get PDU kWh
get ENV status	Get ENV1 and 2 status
Help	command list